 

 

 
 
 
 

 




# DRIVE SHAFT / PROPELLER SHAFT

 
 
 
 
 

 
 
 
 
 

 
## PREPARATION

 



 

 

021BZ-01

### SST

 
 
 
 
 
	09240-00020	Wire Gauge Set	FRONT DRIVE SHAFT
	(09242-00150)	Wire Gauge 1.5 mm (0.059 in.)	FRONT DRIVE SHAFT
	09520-00031	Rear Axle Shaft Puller	FRONT AXLE HUB SUB-ASSY LH
	09520-01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT
	09520-24010	Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT
	(09520-32040)	Shocker Set	FRONT DRIVE SHAFT
	09521-24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT
	09527-10011	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT
	09527-17011	Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB-ASSY LH
	09608-16042	Front Hub Bearing Adjusting Tool	FRONT DRIVE SHAFT
	(09608-02021)	Bolt & Nut	FRONT DRIVE SHAFT
	(09608-02041)	Retainer	FRONT DRIVE SHAFT

## PREPARATION - DRIVE SHAFT / PROPELLER SHAFT

	09608-32010	Steering Knuckle Oil Seal Replacer	FRONT AXLE HUB SUB-ASSY LH
	09628-10011	Ball Joint Puller	REAR AXLE LH HUB BOLT FRONT AXLE LH HUB BOLT
	09628-62011	Ball Joint Puller	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
	09930-00010	Drive Shaft Nut Chisel	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
	09950-00020	Bearing Remover	FRONT DRIVE SHAFT
	09950-40011	Puller B Set	FRONT AXLE HUB SUB-ASSY LH
	(09951-04020)	Hanger 200	FRONT AXLE HUB SUB-ASSY LH
	(09952-04010)	Slide Arm	FRONT AXLE HUB SUB-ASSY LH
	(09953-04030)	Center Bolt 200	FRONT AXLE HUB SUB-ASSY LH
	(09954-04010)	Arm 25	FRONT AXLE HUB SUB-ASSY LH
	(09955-04061)	Claw No.6	FRONT AXLE HUB SUB-ASSY LH
	(09957-04010)	Attachment	FRONT AXLE HUB SUB-ASSY LH
	(09958-04011)	Holder	FRONT AXLE HUB SUB-ASSY LH

	09950-60010 Replacer Set	FRONT AXLE HUB SUB-ASSY LH
	(09951-00370) Replacer 37	FRONT AXLE HUB SUB-ASSY LH
	(09951-00600) Replacer 60	FRONT AXLE HUB SUB-ASSY LH
	(09951-00640) Replacer 64	FRONT AXLE HUB SUB-ASSY LH
	09950-60020 Replacer Set No.2	FRONT AXLE HUB SUB-ASSY LH
	(09951-00720) Replacer 72	FRONT AXLE HUB SUB-ASSY LH
	09950-70010 Handle Set	FRONT AXLE HUB SUB-ASSY LH
	(09951-07100) Handle 100	FRONT AXLE HUB SUB-ASSY LH

**Recommended Tools**

	09011-12301 Socket Wrench 30 mm	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
	09040-00011 Hexagon Wrench Set	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
	(09043-20060) Socket Hexagon Wrench 6	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
	09905-00012 Snap Ring No.1 Expander	FRONT DRIVE SHAFT
	09905-00013 Snap Ring Pliers	FRONT AXLE HUB SUB-ASSY LH

**Equipment**

Torque wrench	
Dial indicator with magnetic base	

**Lubricant**

Item	Capacity
Front drive shaft Inboard joint grease	135 – 155 g (4.8 – 5.5 oz.)