 
 

 
 
 
 
 



 




 
 
 
 
 
 
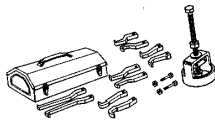 
 
 
 
 
MANUAL TRANSMISSION/TRANSAXLE

021CF-01

 
 
 

 
 
 
 
 


 
 
PREPARATION



 
 
 
 
 
 
 
 

 
 
SST

	09023-12700	Union Nut Wrench 17mm	MANUAL TRANSAXLE ASSY
	09223-50010	Crankshaft Front Oil Seal Replacer	OUTPUT SHAFT ASSY(C59)
	09308-00010	Oil Seal Puller	FRONT DIFFERENTIAL OIL SEAL MANUAL TRANSAXLE ASSY(C59)
	09309-12020	5th Driven Gear Replacer	MANUAL TRANSAXLE ASSY(C59)
	09309-36010	Transmission Rear Bearing Replacer	MANUAL TRANSAXLE ASSY(C59)
	09309-36100	Transmission Bearing Replacer Set	OUTPUT SHAFT ASSY(C59)
	(09309-03610)	Body	OUTPUT SHAFT ASSY(C59)
	09316-60011	Transmission & Transfer Bearing Replacer	MANUAL TRANSAXLE ASSY(C59) INPUT SHAFT ASSY(C59) OUTPUT SHAFT ASSY(C59)
	(09316-00011)	Replacer Pipe	MANUAL TRANSAXLE ASSY(C59)
	(09316-00021)	Replacer "A"	INPUT SHAFT ASSY(C59)
	(09316-00031)	Replacer "B"	OUTPUT SHAFT ASSY(C59)
	09350-32014	TOYOTA Automatic Transmission Tool Set	MANUAL TRANSAXLE ASSY(C59)











 


	(09351-32120) Overdrive Bearing Replacer	MANUAL TRANSAXLE ASSY(C59)
	09520-01010 Drive Shaft Remover Attachment	MANUAL TRANSAXLE ASSY FRONT DIFFERENTIAL OIL SEAL
	09520-24010 Differential Side Gear Shaft Puller	MANUAL TRANSAXLE ASSY FRONT DIFFERENTIAL OIL SEAL
	(09520-32040) Shocker Set	MANUAL TRANSAXLE ASSY FRONT DIFFERENTIAL OIL SEAL
	09554-14010 Differential Oil Seal Replacer	FRONT DIFFERENTIAL OIL SEAL
	09564-32011 Differential Preload Adaptor	MANUAL TRANSAXLE ASSY(C59)
	09608-00071 Drive Pinion Rear Bearing Cone Replacer	OUTPUT SHAFT ASSY(C59)
	09612-22011 Tilt Handle Bearing Replacer	OUTPUT SHAFT ASSY(C59)
	09612-65014 Steering Worm Bearing Puller	MANUAL TRANSAXLE ASSY(C59)
	(09612-01040) Claw "D"	MANUAL TRANSAXLE ASSY(C59)
	(09612-01050) Hanger Pin with Nut	MANUAL TRANSAXLE ASSY(C59)
	(09612-01060) Claw "E"	MANUAL TRANSAXLE ASSY(C59)
	09628-62011 Boll Joint Puller	MANUAL TRANSAXLE ASSY FRONT DIFFERENTIAL OIL SEAL

 



PREPARATION - MANUAL TRANSMISSION/TRANSAXLE

	09636-20010	Upper Ball Joint Dust Cover Replacer	MANUAL TRANSAXLE ASSY(C59) INPUT SHAFT ASSY(C59)
	09670-00010	Front Crossmember Guide Tool	MANUAL TRANSAXLE ASSY
	09710-20011	Front Suspension Bushing Tool Set	MANUAL TRANSAXLE ASSY(C59)
	(09710-06071)	Replacer	MANUAL TRANSAXLE ASSY(C59)
	09817-16011	Back-up Light Switch Tool	MANUAL TRANSAXLE ASSY(C59)
	09930-00010	Drive Shaft Nut Chisel	MANUAL TRANSAXLE ASSY FRONT DIFFERENTIAL OIL SEAL
	09950-00020	Bearing Remover	MANUAL TRANSAXLE ASSY(C59) INPUT SHAFT ASSY(C59) OUTPUT SHAFT ASSY(C59)
	09950-00030	Bearing Remover Attachment	MANUAL TRANSAXLE ASSY(C59)
	09950-30012	Puller A Set	MANUAL TRANSAXLE ASSY(C59)
	(09951-03010)	Upper Plate	MANUAL TRANSAXLE ASSY(C59)
	(09953-03010)	Center Bolt	MANUAL TRANSAXLE ASSY(C59)
	(09954-03010)	Arm	MANUAL TRANSAXLE ASSY(C59)
	(09955-03011)	Claw No.1	MANUAL TRANSAXLE ASSY(C59)

 
 

 

 
 
	(09957-04010) Attachment	MANUAL TRANSAXLE ASSY(C59)
	09950-40011 Puller B Set	MANUAL TRANSAXLE ASSY(C59)
	(09951-04010) Hanger 150	MANUAL TRANSAXLE ASSY(C59)
	(09951-04020) Hanger 200	MANUAL TRANSAXLE ASSY(C59)
	(09952-04010) Slide Arm	MANUAL TRANSAXLE ASSY(C59)
	(09953-04020) Center Bolt 150	MANUAL TRANSAXLE ASSY(C59)
	(09953-04030) Center Bolt 200	MANUAL TRANSAXLE ASSY(C59)
	(09954-04010) Arm 25	MANUAL TRANSAXLE ASSY(C59)
	(09955-04061) Claw No.6	MANUAL TRANSAXLE ASSY(C59)
	(09955-04071) Claw No.7	MANUAL TRANSAXLE ASSY(C59)
	(09957-04010) Attachment	MANUAL TRANSAXLE ASSY(C59)
	(09958-04011) Holder	MANUAL TRANSAXLE ASSY(C59)
	09950-60010 Replacer Set	MANUAL TRANSAXLE ASSY(C59) OUTPUT SHAFT ASSY(C59) SHIFT & SELECT LEVER SHAFT ASSY(C59)

PREPARATION - MANUAL TRANSMISSION/TRANSAXLE

	<p>(09951-00190) Replacer 19</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00200) Replacer 20</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00220) Replacer 22</p>	<p>SHIFT & SELECT LEVER SHAFT ASSY(C59)</p>
	<p>(09951-00360) Replacer 36</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00370) Replacer 37</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00420) Replacer 42</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00450) Replacer 45</p>	<p>OUTPUT SHAFT ASSY(C59)</p>
	<p>(09951-00530) Replacer 53</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00550) Replacer 55</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00600) Replacer 60</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>09950-60020 Replacer Set No.2</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00680) Replacer 68</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>
	<p>(09951-00710) Replacer 71</p>	<p>MANUAL TRANSAXLE ASSY(C59)</p>

	09950-70010	Handle Set	FRONT DIFFERENTIAL OIL SEAL MANUAL TRANSAXLE ASSY(C59) SHIFT & SELECT LEVER SHAFT ASSY(C59)
	(09951-07100)	Handle 100	MANUAL TRANSAXLE ASSY(C59) SHIFT & SELECT LEVER SHAFT ASSY(C59)
	(09951-07150)	Handle 150	MANUAL TRANSAXLE ASSY(C59)
	(09951-07200)	Handle 200	FRONT DIFFERENTIAL OIL SEAL

Recommended Tools

	09011-12301	Socket Wrench 30 mm	MANUAL TRANSAXLE ASSY FRONT DIFFERENTIAL OIL SEAL
	09031-00030	Pin Punch	DIFFERENTIAL CASE ASSY(C59)
	09031-00040	Pin Punch .	MANUAL TRANSAXLE ASSY(C59) SHIFT & SELECT LEVER SHAFT ASSY(C59)
	(09043-20060)	Socket Hexagon Wrench 6	MANUAL TRANSAXLE ASSY(C59)
	09042-00010	Torx Socket T30	FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT
	(09043-20060)	Socket Hexagon Wrench 6	MANUAL TRANSAXLE ASSY(C59)
	09905-00012	Snap Ring No.1 Expander	MANUAL TRANSAXLE ASSY(C59)

Equipment

Dial indicator	
Feeler gauge	
Micrometer	
Torque wrench	
Slide calipers	

Lubricant

Item	Capacity	Classification
C59 Manual transaxle oil (w/ Differential oil)	1.9 liters (2.0 US qts, 1.7 Imp. qts)	API GL-4 or GL-5 SAE 75W-90