


| | | |
|------------|-----------------|-----------------------------|
| DTC | C0226/21 | SFR SOLENOID CIRCUIT |
| DTC | C0236/22 | SFL SOLENOID CIRCUIT |
| DTC | C0246/23 | SRR SOLENOID CIRCUIT |
| DTC | C0256/24 | SRL SOLENOID CIRCUIT |

CIRCUIT DESCRIPTION

This solenoid goes on when signals are received from the ECU and controls the pressure acting on the wheel cylinders thus controlling the braking force.

| DTC No. | DTC Detecting Condition | Trouble Area |
|--|---|---|
| C0226/21 C0236/22 C0246/23 C0256/24 | Detection of any condition in 1. and 2.: 1. With IG1 terminal voltage at 10V – 16V, solenoid circuit is open or short circuit for 0.05 sec. or longer. 2. With IG1 terminal voltage at 10V – 16V, during ABS control solenoid relay contact is OFF for 0.05 sec. or longer. | <ul style="list-style-type: none"> • Each solenoid circuit • Brake actuator |

WIRING DIAGRAM

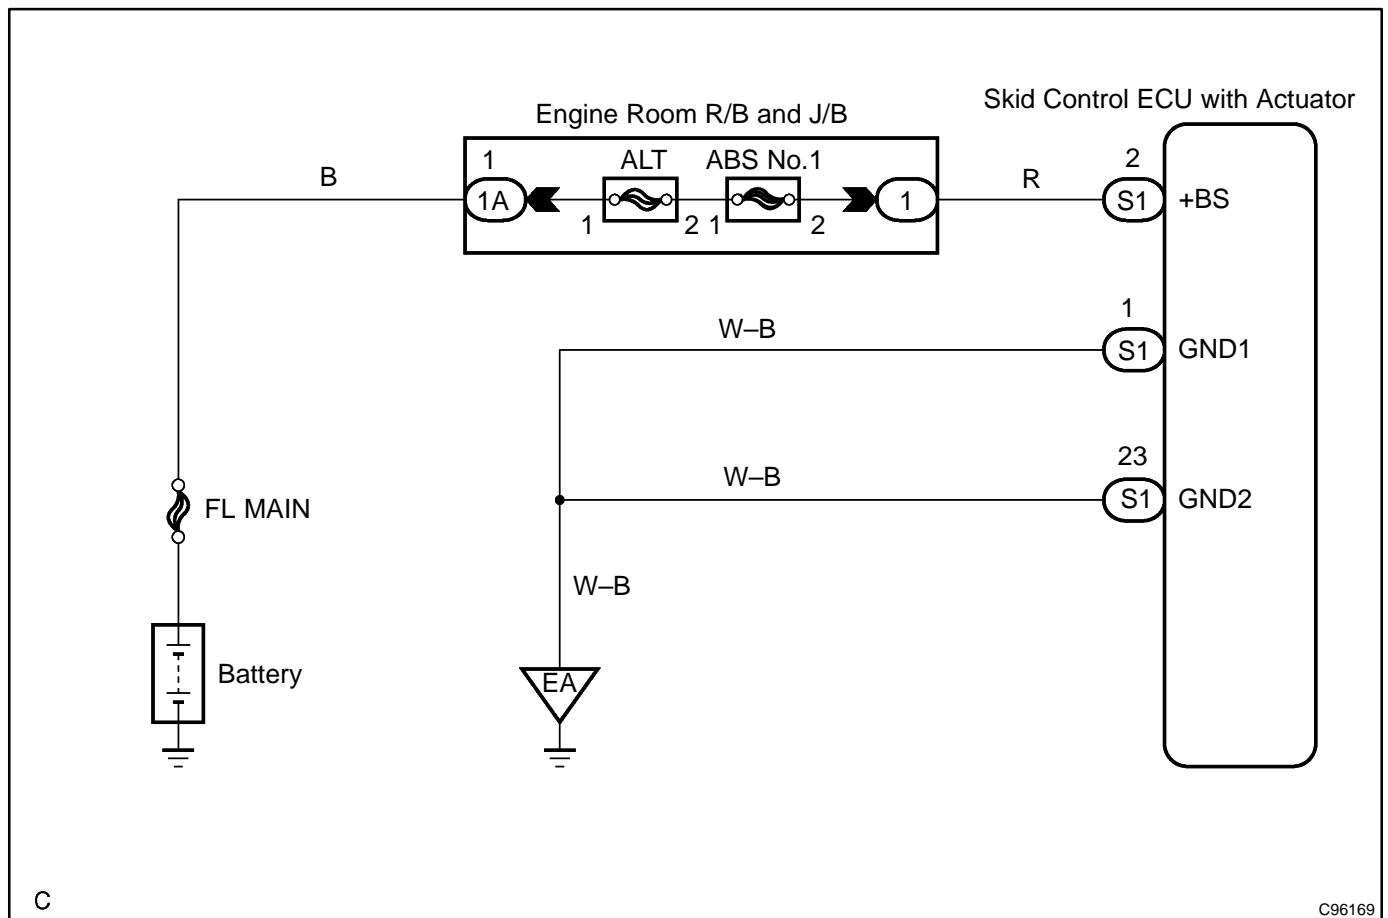

C

C96169

INSPECTION PROCEDURE**1 RECONFIRM DTC**

(a) Check if the other DTCs are recorded (See page [05-297](#)).

YES**REPAIR CIRCUIT INDICATED BY OUTPUT CODE****NO****REPLACE BRAKE ACTUATOR ASSY**