


TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION

Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

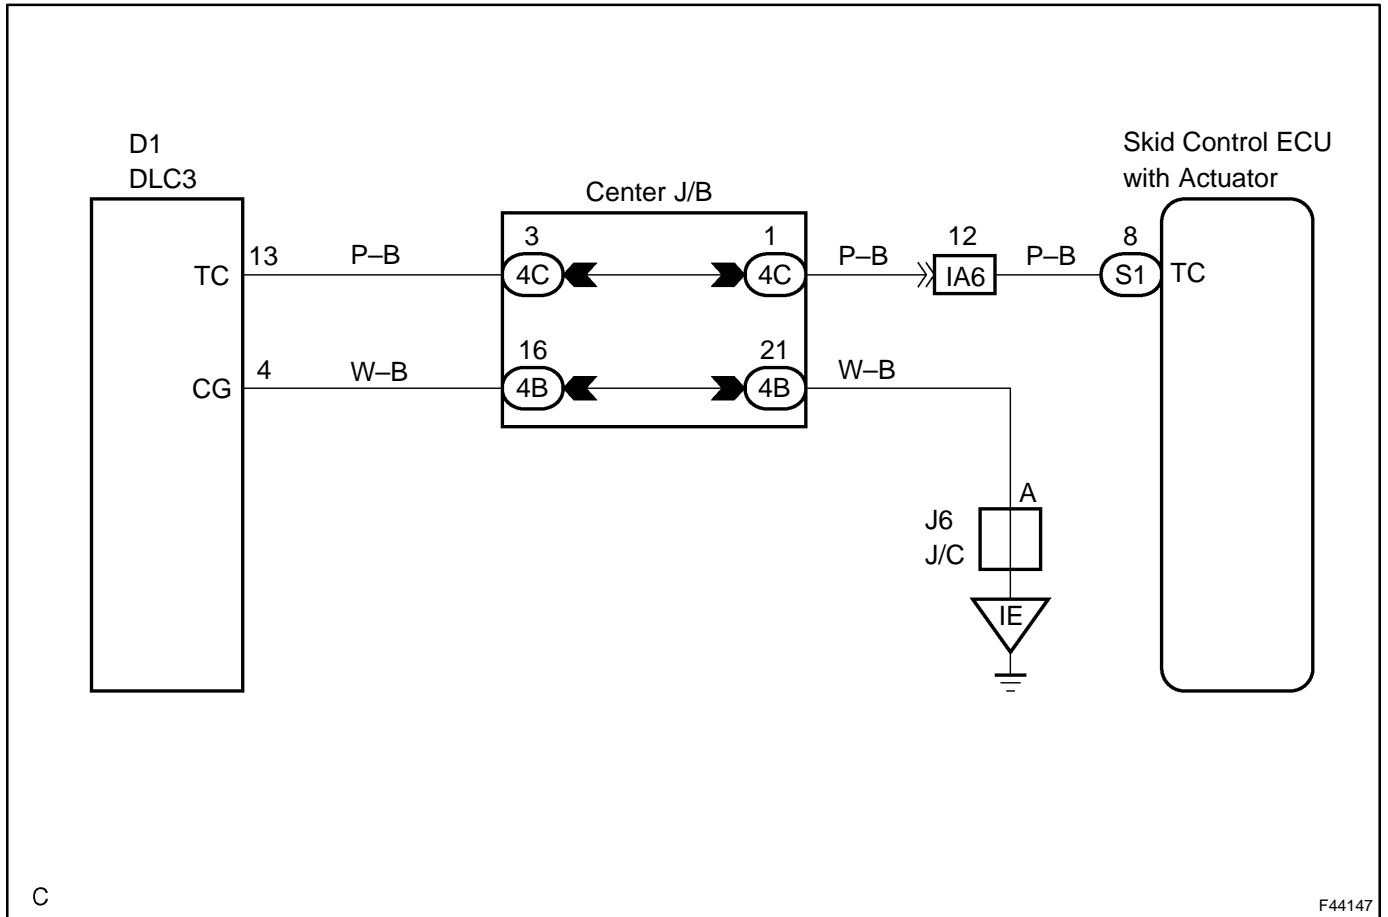


C

F44147

INSPECTION PROCEDURE

1 INSPECT DLC3 TERMINAL VOLTAGE(Tc TERMINAL)

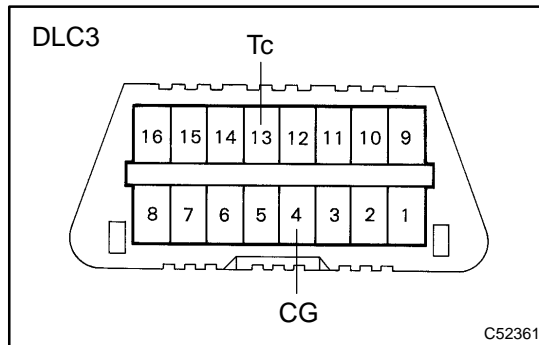

- (a) Turn the ignition switch to ON.
- (b) Measure voltage between terminals Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK → Go to step 3

NG

2 CHECK HARNESS AND CONNECTOR(DLC3 – BODY GROUND)

- (a) Check for open and short circuit in harness and connector between terminal CG of the DLC3 and body ground (See page 01-30).

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3 CHECK HARNESS AND CONNECTOR(SKID CONTROL ECU – DLC3)

- (a) Check for open and short circuit in harness and connector between terminal Tc of the skid control ECU and DLC3 (See page 01-30).

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE BRAKE ACTUATOR ASSY (See page 05-306)