


TERMINALS OF ECU

1. RADIO RECEIVER ASSY

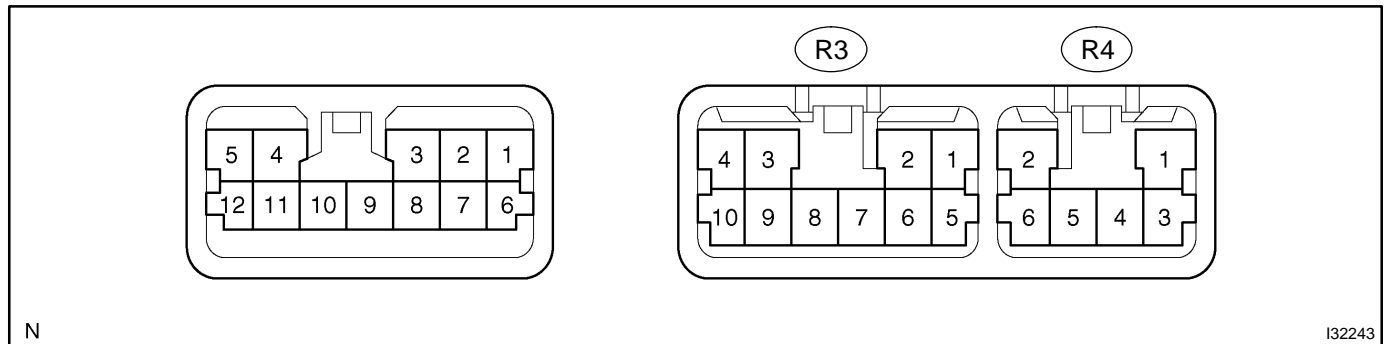

Symbols (Terminals No.)	Wirin Color	Condition	STD Voltage (V)
R3-1 ⇔ R3-7 (FR+ ⇔ GND)	LG ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R3-2 ⇔ R3-7 (FL+ ⇔ GND)	P ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R3-3 ⇔ R3-7 (ACC ⇔ GND)	GR ⇔ BR	Ignition switch OFF	Below 1 V
		Ignition switch ON	10 - 14 V
R3-4 ⇔ R3-7 (+B ⇔ GND)	L-W ⇔ BR	Constant	10 - 14 V
R3-5 ⇔ R3-7 (FR- ⇔ GND)	L ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R3-6 ⇔ R3-7 (FL- ⇔ GND)	V ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R3-7 ⇔ Body ground (GND ⇔ Body ground)	BR ⇔ Body ground	Constant	Below 1 V
R3-8 ⇔ - (ANT+ ⇔ -)	B ⇔ -	See "Service check mode"	-
R3-10 ⇔ R3-7 (ILL+ ⇔ GND)	G ⇔ BR	Light control switch TAIL or HEAD	10 - 14 V
R4-1 ⇔ R3-7 (RR+ ⇔ GND)	R ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R4-2 ⇔ R3-7 (RL+ ⇔ GND)	B ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R4-3 ⇔ R3-7 (RR- ⇔ GND)	W ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output
R4-5 ⇔ R3-7 (ILL- ⇔ GND)	W-B ⇔ BR	Light control switch HI or FLASH	10 - 14 V
R4-6 ⇔ R3-7 (RL- ⇔ GND)	Y ⇔ BR	Audio system is sounding	A waveform synchronized with sounds is output