



# PRESSING POWER SWITCH DOES NOT START SYSTEM

## WIRING DIAGRAM

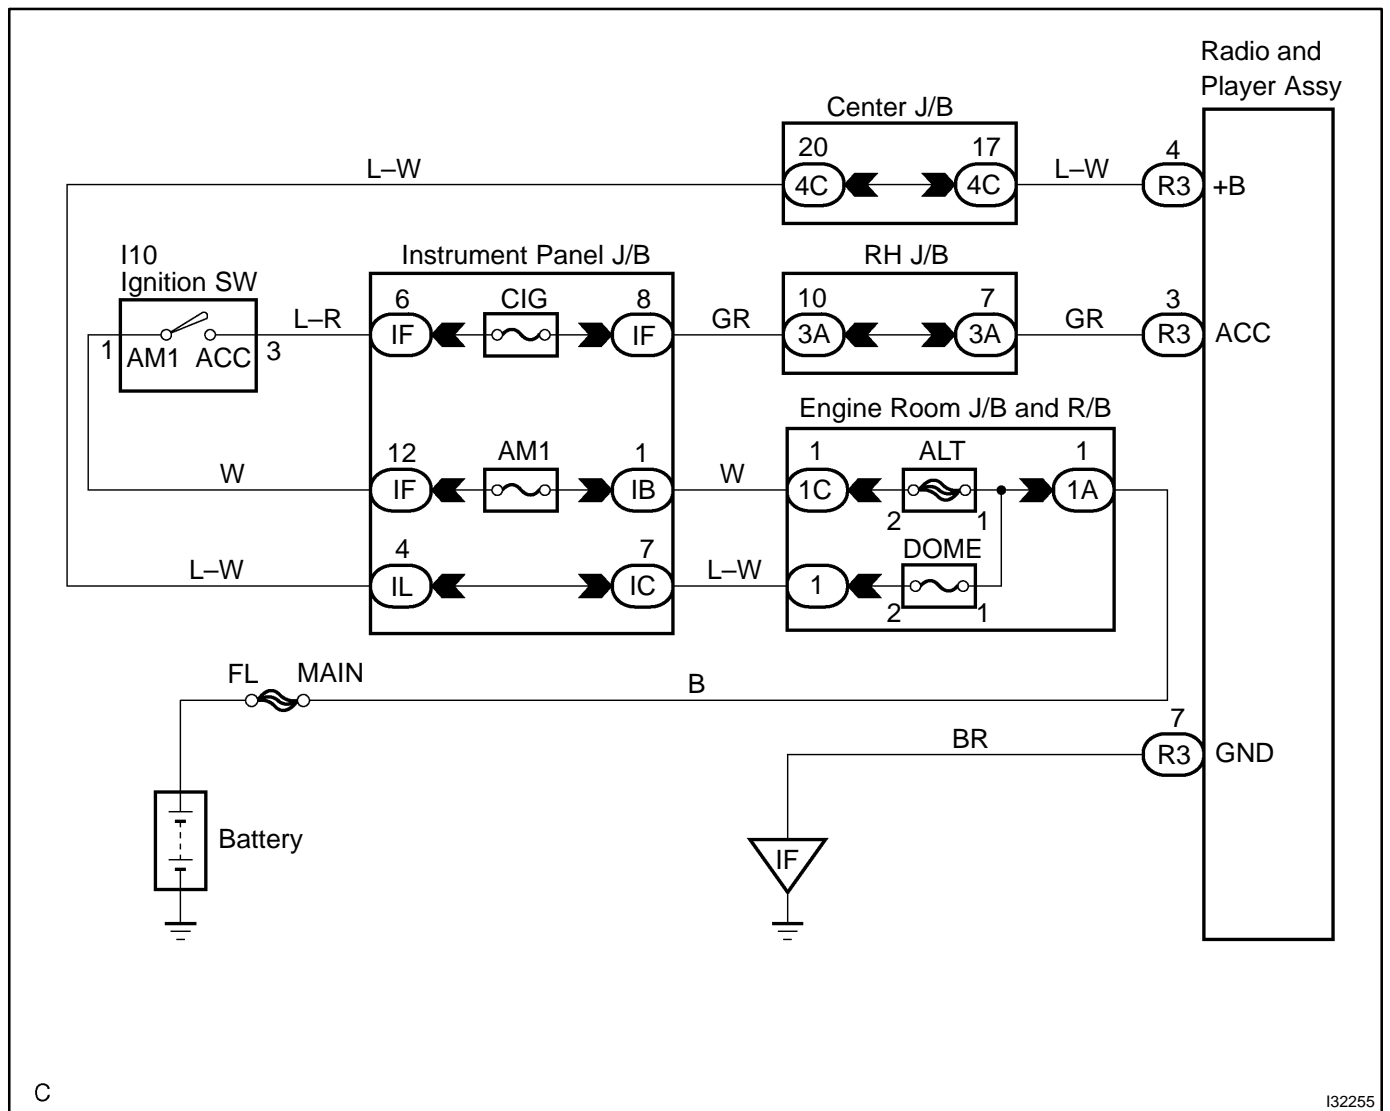

## INSPECTION PROCEDURE

### 1 INSPECT RADIO RECEIVER ASSY(+B, ACC, GND)

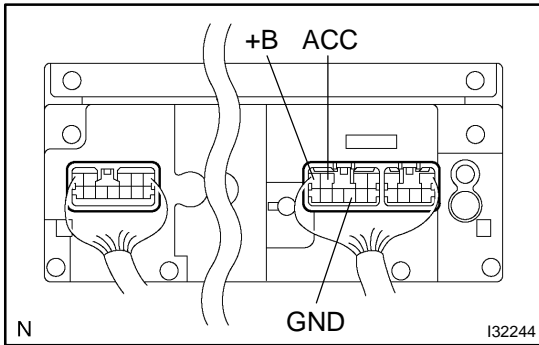

(a) Check that the continuity between terminals at each condition, as shown in the chart.

**Standard:**

Tester connection	Condition	Specified condition
GND - Body ground	Constant	Continuity

(b) Check that the voltage between terminals at each condition, as shown in the chart.

**Standard:**

Tester connection	Condition	Specified condition
+B - GND	Constant	10 - 14 V
ACC - GND	Ignition switch ACC or ON	10 - 14 V

**NG** → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

**OK**

### CHECK AND REPLACE RADIO RECEIVER ASSY