

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspect Area	See page
Pressing power switch does not start system.	3. Radio receiver assy power source circuit 4. Radio receiver assy	05-610
Turning on light switch does not light up night time illumination of radio receiver.	1. Radio receiver assy ILL terminal circuit 2. Radio receiver assy	05-612
No sound is heard from speaker in all modes.	1. Speaker circuit 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-614
Sound quality is bad in all modes. (Volume is too low)	1. Speaker circuit 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-617
Radio broadcast cannot be received. (Bad reception)	1. Antenna circuit 2. Radio receiver assy	05-619
Cassette tape cannot be inserted or played.	1. Cassette tape 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-621
Cassette tape cannot be ejected.	1. Cassette tape 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-623
Sound quality is bad only when playing tape.	1. Cassette tape 2. Radio receiver assy	05-617
Tape is tangled due to incorrect tape speed or auto-reverse malfunction.	1. Cassette tape 2. Radio receiver assy	05-626
CD cannot be inserted or is ejected right after insertion.	1. CD 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-627
Although system is powered, CD cannot be played.	1. CD 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-629
CD cannot be taken out.	1. CD 2. Radio receiver assy power source circuit 3. Radio receiver assy	05-632
Sound quality is bad only when CD is played.(Volume is too low)	1. CD	05-634
CD sound skips.	1. CD 2. Radio installation	05-635
Noise occurs.	–	05-637