

## TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO-REVERSE MALFUNCTION

### INSPECTION PROCEDURE

#### 1 CHECK FOR ANY FOREIGN OBJECT

(a) Check for any foreign object.

- (1) Check that no foreign material and troubles are detected in the radio receiver assembly cassette tape player.

**Standard: No foreign material and trouble detected.**

**NG** → REMOVE FOREIGN OBJECT

**OK**

#### 2 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK(BELOW 90 MIN.)

(a) Replace the cassette tape with another and recheck.


- (1) Replace the faulty cassette tape with the normal one (90 min. or less) to see if the same trouble occurs again.

**Standard: malfunction disappear.**

**OK** → CASSETTE TAPE FAULTY

**NG**

#### 3 CLEAN HEAD AND CHECK OPERATION

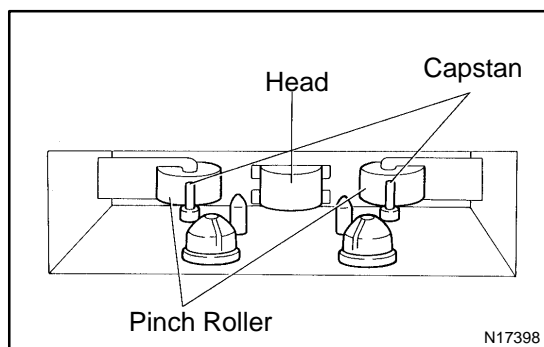

(a) Head cleaning

- (1) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check that the same trouble occurs again.

**OK** → HEAD DIRTY

**NG**

#### CHECK AND REPLACE RADIO RECEIVER ASSY