

# ELECTRONIC CONTROLLED AUTOMATIC TRANSAXLE [ECT] (Apr., 2003)

05C0T-05

## PRECAUTION

### NOTICE:

Perform the **RESET MEMORY (AT initialization)** when replacing the automatic transaxle assy, engine assy or ECM (See page [05-371](#)).

### HINT:

Initialization can not be completed by only removing the battery.