

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for the code. For details of each code, turn to the page referred to under the "See page" for respective "DTC No." in the DTC chart.

DTC No. (See Page)	Detection Item	Trouble Area
11 (05-755)	<ul style="list-style-type: none"> • Short in actuator motor circuit. 	<ul style="list-style-type: none"> • Cruise control actuator assy (Actuator motor) • Actuator motor circuit • Cruise control ECU assy
12 (05-757)	<ul style="list-style-type: none"> • Short in actuator magnetic clutch circuit. • Open (0.8 sec.) in actuator magnetic clutch circuit. 	<ul style="list-style-type: none"> • STOP Fuse • Stop lamp switch assy • Cruise control actuator assy (Actuator magnetic clutch) • Actuator magnetic clutch circuit • Cruise control ECU assy
15 (05-755)	<ul style="list-style-type: none"> • Open in actuator motor circuit. 	<ul style="list-style-type: none"> • Cruise control actuator assy (Actuator motor)
14 (05-760)	<ul style="list-style-type: none"> • Cruise control actuator assy mechanical malfunction. 	<ul style="list-style-type: none"> • Cruise control actuator assy (Actuator motor) (Actuator lock: motor, arm) • Cruise control ECU assy
21 (05-763)	<ul style="list-style-type: none"> • Speed signal is not input to the cruise control ECU assy while cruise control is set. 	<ul style="list-style-type: none"> • Combination meter assembly • Vehicle speed sensor • Vehicle speed sensor circuit • Cruise control ECU assy
23 (05-763)	<ul style="list-style-type: none"> • Vehicle speed sensor pulse is abnormal. 	<ul style="list-style-type: none"> • Vehicle speed sensor • Cruise control ECU assy
41	<ul style="list-style-type: none"> • Cruise control ECU 	<ul style="list-style-type: none"> • Cruise control ECU assy
42	<ul style="list-style-type: none"> • Source voltage drop 	<ul style="list-style-type: none"> • Power source
51 (05-765)	<ul style="list-style-type: none"> • Short in idle signal circuit. 	<ul style="list-style-type: none"> • Throttle position sensor • Idle signal circuit • ECM • Cruise control ECU assy