


CRUISE MAIN INDICATOR LIGHT CIRCUIT

CIRCUIT DESCRIPTION


When the cruise control main switch assy button is turned to ON, CRUISE main indicator light comes on.

WIRING DIAGRAM

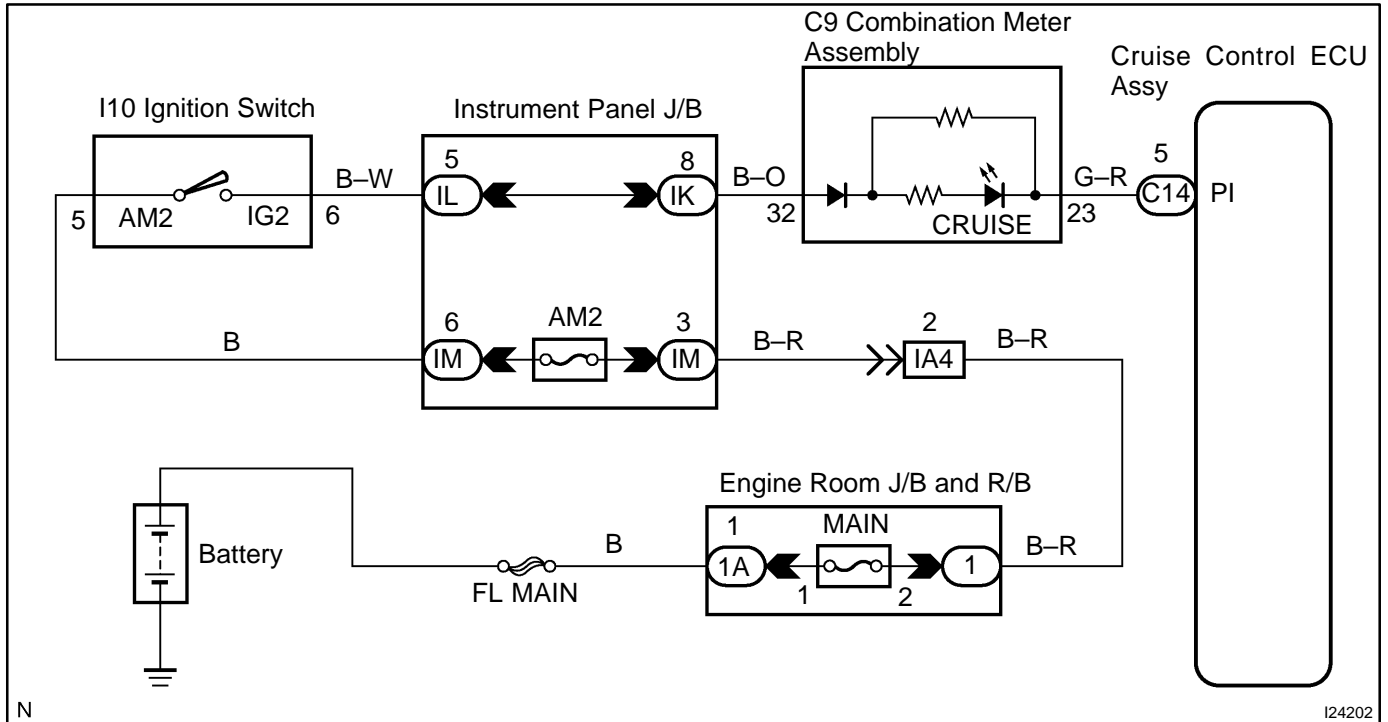

INSPECTION PROCEDURE

1 INSPECT TERMINAL VOLTAGE(PI)

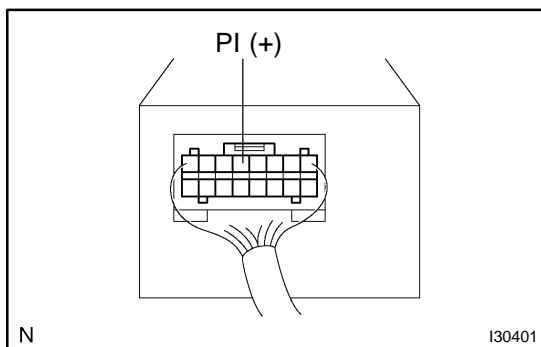

- (a) Turn the ignition switch to ON.
- (b) Measure voltage between terminal 5 (PI) of cruise control ECU assy and body ground, when the cruise control main switch button is ON and OFF.

OK:

Cruise Control Switch Button Position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK → PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (See page 05-754)

NG

2 INSPECT COMBINATION METER ASSY (See page 05-638)**NG****REPLACE COMBINATION METER ASSY****OK****3 CHECK HARNESS AND CONNECTOR(BETWEEN CRUISE CONTROL ECU ASSY AND COMBINATION METER ASSEMBLY)**

- (a) Check for open and short circuit in harness and connector between cruise control ECU assy and combination meter assembly (See page 01-30).

NG**REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****CHECK AND REPLACE CRUISE CONTROL ECU ASSY (See page 01-30)**