

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem, symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspect Area	See page
SET not occurring or CANCEL occurring. (DTC is Normal)	<ol style="list-style-type: none"> 1. Cruise control main switch circuit (Cruise control switch) 2. Vehicle speed sensor circuit 3. Stop lamp switch circuit 4. Park/neutral position switch circuit (A/T) Clutch switch circuit (M/T) 5. Actuator motor circuit 6. Cruise control cable 7. Cruise control ECU assy 	05-786 05-763 05-767 05-773 05-776 82-1 01-30
SET not occurring or CANCEL occurring. (DTC dose not output)	<ol style="list-style-type: none"> 1. ECU power source circuit 2. Cruise control ECU assy 	05-779 01-30
Actual vehicle speed deviates above or below the set speed.	<ol style="list-style-type: none"> 1. Cruise control cable 2. Vehicle speed signal abnormal 3. Electronically controlled transmission communication circuit (A/T) 4. Actuator motor circuit 5. Idle signal circuit (Main throttle position sensor) 6. Cruise control ECU assy 	82-1 05-763 05-770 05-755 05-765 01-30
A/T: Gear shifting frequent between 3rd and O/D when driving on uphill road. (Hurting)	<ol style="list-style-type: none"> 1. Electronically controlled transmission communication circuit 2. Cruise control ECU assy 	05-770 01-30
Cruise control not cancelled, even when brake pedal is depressed.	<ol style="list-style-type: none"> 1. Cruise control cable 2. Stop lamp switch circuit 3. Actuator motor circuit 4. Cruise control ECU assy 	82-1 05-767 05-755 01-30
A/T: Cruise control not cancelled, even when transmission is shifted to "N" position.	<ol style="list-style-type: none"> 1. Cruise control cable 2. Park/neutral position switch circuit 3. Actuator motor circuit 4. Cruise control ECU assy 	82-1 05-773 05-755 01-30
Control switch does not operate. (SET/COAST, ACC/RES, CANCEL not possible)	<ol style="list-style-type: none"> 1. Cruise control cable 2. Actuator motor circuit 3. Cruise control ECU assy 	82-1 05-755 01-30
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less.	<ol style="list-style-type: none"> 1. Cruise control cable 2. Vehicle speed signal abnormal 3. Actuator motor circuit 4. Cruise control ECU assy 	82-1 05-763 05-755 01-30
Poor response is ACCEL and RESUME modes.	<ol style="list-style-type: none"> 1. Cruise control cable 2. Electronically controlled transmission communication circuit (A/T) 3. Actuator motor circuit 4. Cruise control ECU assy 	82-1 05-770 05-755 01-30
A/T: O/D does not RESUME, even though the road is not uphill.	<ol style="list-style-type: none"> 1. Electronically controlled transmission communication circuit 2. Cruise control ECU assy 	05-770 01-30
DTC memory is erased.	<ol style="list-style-type: none"> 1. Cruise control ECU assy 	01-30
DTC is not output, or is output when it should not be.	<ol style="list-style-type: none"> 1. Diagnosis circuit 2. Cruise control ECU assy 	05-788 01-30
Cruise main indicator light remains ON or falls to light up.	<ol style="list-style-type: none"> 1. Cruise main indicator light circuit 2. Cruise control ECU assy 	05-786 01-30