

## FAIL-SAFE CHART

If any of the following codes is recorded, the ECM enters the fail-safe mode.

DTC No.	Fail-Safe Operation	Fail-Safe Deactivation Conditions
P0031 P0032 P0037 P0038	The heater circuit in which the abnormality is detected is turned off	Ignition switch OFF
P0100 P0102 P0103	Ignition timing is calculated from engine speed and a throttle angle	"Pass" condition detected.
P0110 P0112 P0113	Intake air temperature is fixed at 20°C (68°F)	"Pass" condition detected.
P0115 P0117 P0118	Engine coolant temperature is fixed at 80°C (176°F)	"Pass" condition detected.
P0120 P0122 P0123	Fuel cut intermittently	"Pass" condition detected and ignition switch OFF
P0121	Fuel cut intermittently	"Pass" condition detected and ignition switch OFF
P0325 P0327 P0328	Max. ignition timing retardation	Ignition switch OFF
P0351 P0352 P0353 P0354	Fuel cut	"Pass" condition detected.