

DTC	B0100/13	SHORT IN D SQUIB CIRCUIT
------------	-----------------	---------------------------------


CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assy center, spiral cable sub-assy and horn button assy. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B0100/13 is recorded when a short is detected in the D squib circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0100/13	<ul style="list-style-type: none"> • Short circuit between D+ wire harness and D- wire harness of squib • D squib malfunction • Spiral cable sub-assy malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Horn button assy (D squib) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire


WIRING DIAGRAM

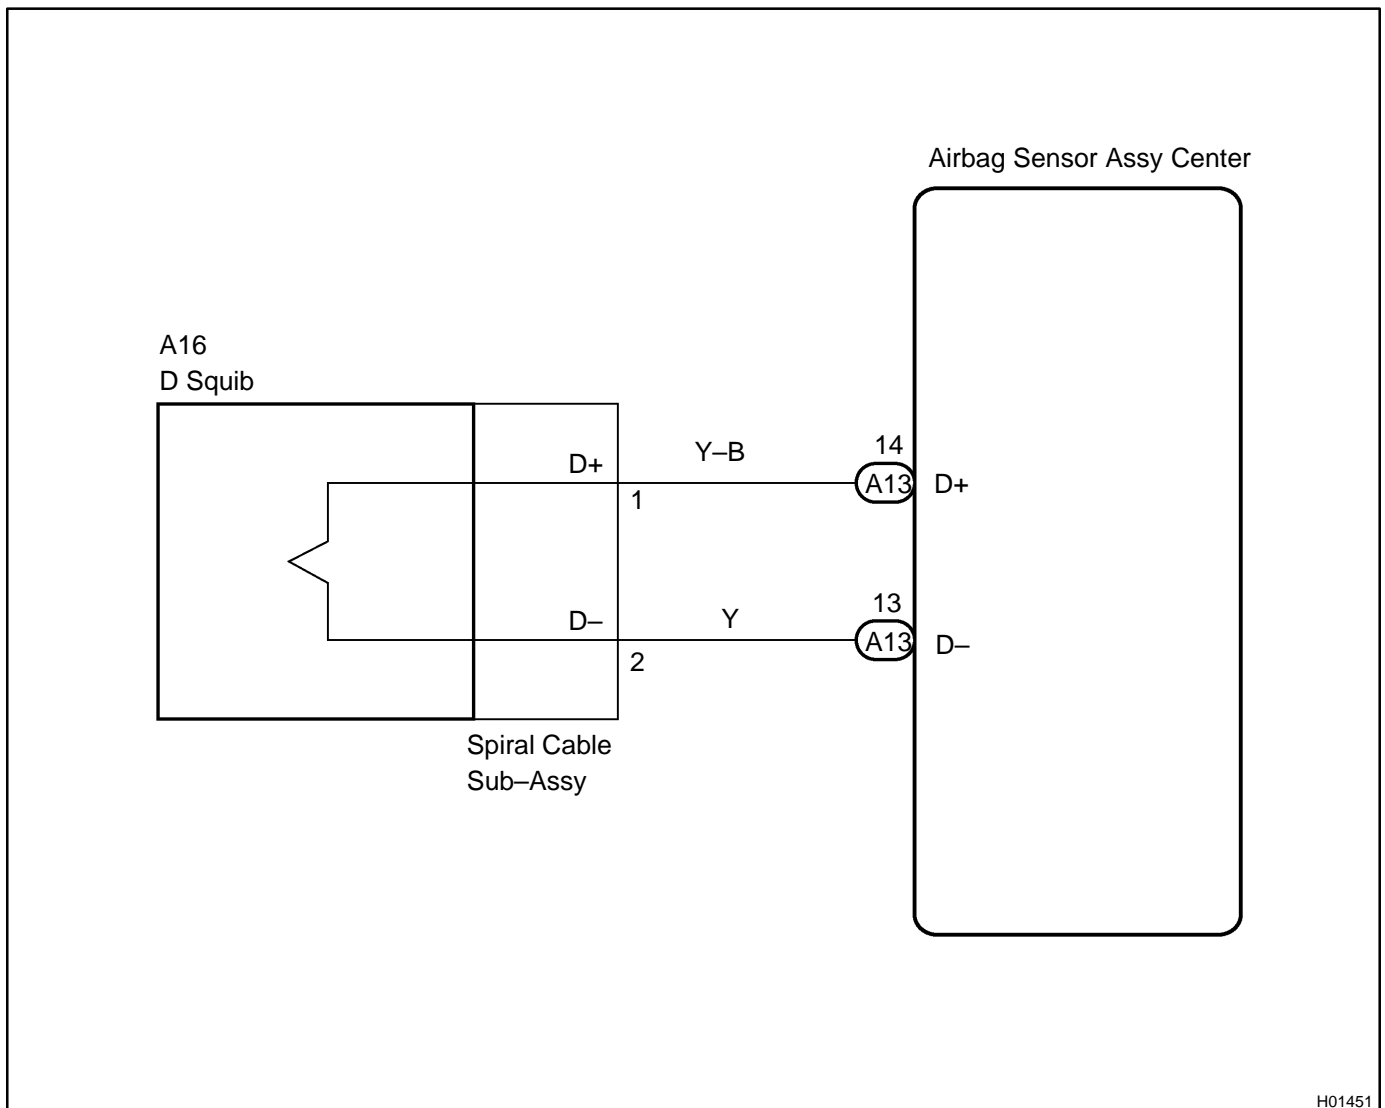

H01451

INSPECTION PROCEDURE

1	CHECK D SQUIB CIRCUIT(AIRBAG SENSOR ASSY CENTER – HORN BUTTON ASSY)
----------	--

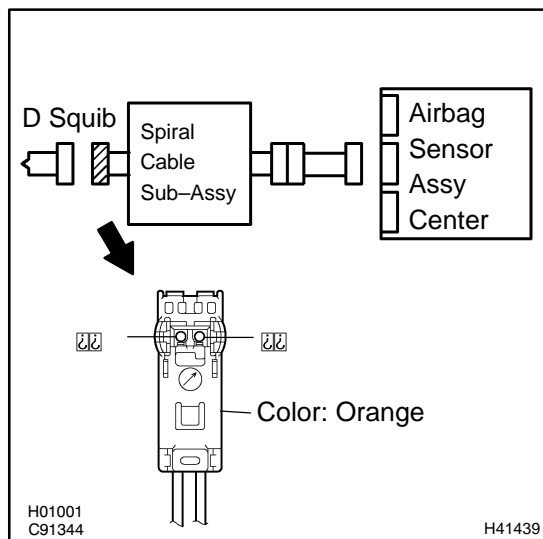


- (a) Disconnect the negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- (b) Disconnect the connectors between the airbag sensor assy center and the horn button assy.
- (c) Release the airbag activation prevention mechanism of the connector (on the airbag sensor assy center side) between the airbag sensor assy center and the spiral cable sub-assy (See page 05-424).
- (d) For the connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D+ and D–.

OK:**Resistance: 1 MΩ or Higher****NG****Go to step 4****OK**

2	CHECK AIR BAG SENSOR ASSY CENTER
----------	---

SST 09843-18040

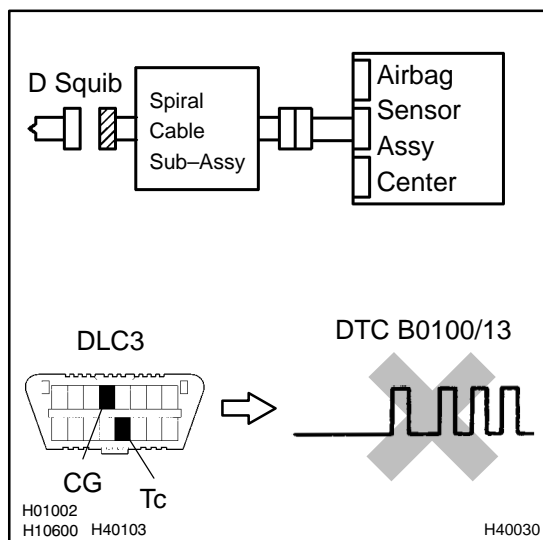

- (a) Connect the connector to the airbag sensor assy center.
- (b) Connect the negative (–) terminal cable to the battery, and wait at least for 2 seconds.
- (c) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (d) Clear the DTC stored in memory (See page 05-424).
- (e) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- (f) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (g) Check the DTC (See page 05-424).


OK:**DTC B0100/13 is not output.****HINT:**

Codes other than code B0100/13 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK D SQUIB

SST 09843-18040

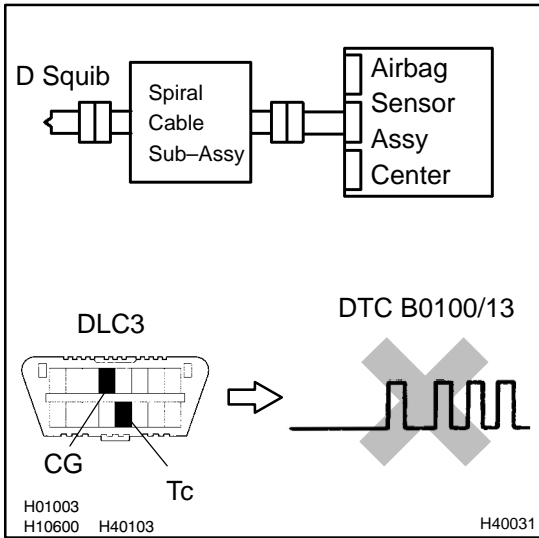

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Connect the horn button assy connectors.
- (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (e) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (f) Clear the DTC stored in memory (See page 05-424).
- (g) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- (h) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (i) Check the DTC (See page 05-424).

OK:

DTC B0100/13 is not output.

HINT:


Codes other than code B0100/13 may be output at this time, but they are not relevant to this check.

NG → **REPLACE HORN BUTTON ASSY**

OK

USE SIMULATION METHOD TO CHECK

4 CHECK INSTRUMENT PANEL WIRE(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)

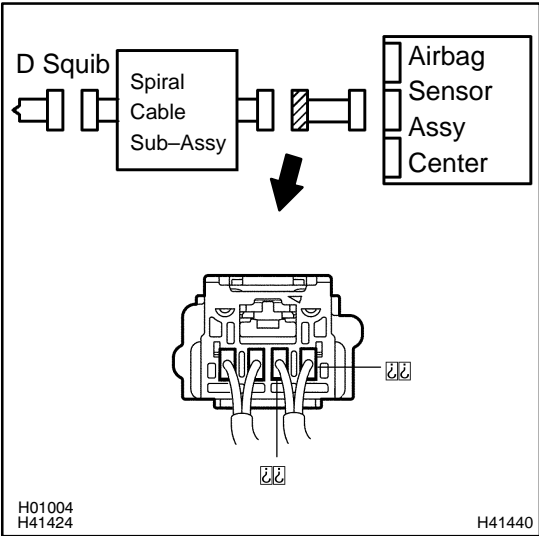


- (a) Disconnect the connector of the instrument panel wire.
 - (b) Release the airbag activation prevention mechanism of the connector (on the airbag sensor assy center side) between the airbag sensor assy center and the spiral cable sub-assy (See page 05-424).
 - (c) For the connector (on the spiral cable sub-assy side) between the airbag sensor assy center and the spiral cable sub-assy, measure the resistance between D+ and D-.
- OK:**
Resistance: 1 MΩ or Higher

NG → **REPAIR OR REPLACE INSTRUMENT PANEL WIRE(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)**

OK

5 CHECK SPIRAL CABLE SUB-ASSY

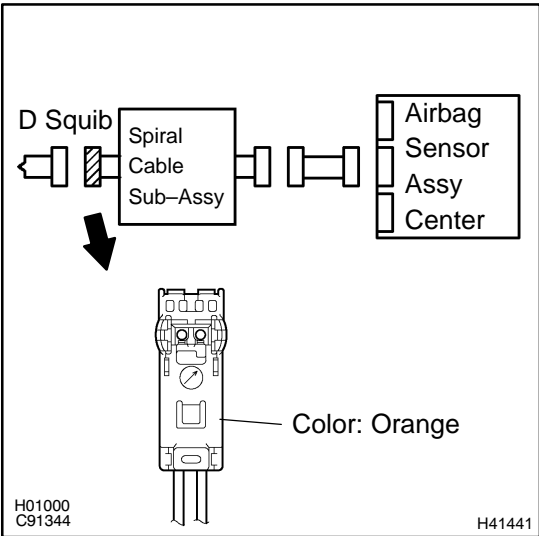

- (a) Release the airbag activation prevention mechanism of the spiral cable sub-assy connector on the airbag sensor assy center side (See page 05-424).
 - (b) For the orange connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D+ and D-.
- OK:**
Resistance: 1 MΩ or Higher

NG → **REPLACE SPIRAL CABLE SUB-ASSY**

OK

USE SIMULATION METHOD TO CHECK