

PROBLEM SYMPTOMS TABLE

HINT:

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none"> When the ignition switch is in the ON position, the SRS warning light sometimes comes on after approximately 6 seconds. SRS warning light always comes on even when DTC is not output. 	<ul style="list-style-type: none"> SRS warning light circuit malfunction (Always lights up, when DTC is not output). 	05-585
<ul style="list-style-type: none"> With the ignition switch is in the ON position, the SRS warning light does not come on. 	<ul style="list-style-type: none"> SRS warning light circuit malfunction (Does not light up, when ignition switch is turned to ON). 	05-588
<ul style="list-style-type: none"> Although a SRS warning light operates normally, DTC or a normal system code is not displayed. Although the terminals TC and CG are not connected, DTC or a normal system code are displayed. 	<ul style="list-style-type: none"> TC terminal circuit 	05-590