


## TERMINALS OF ECU

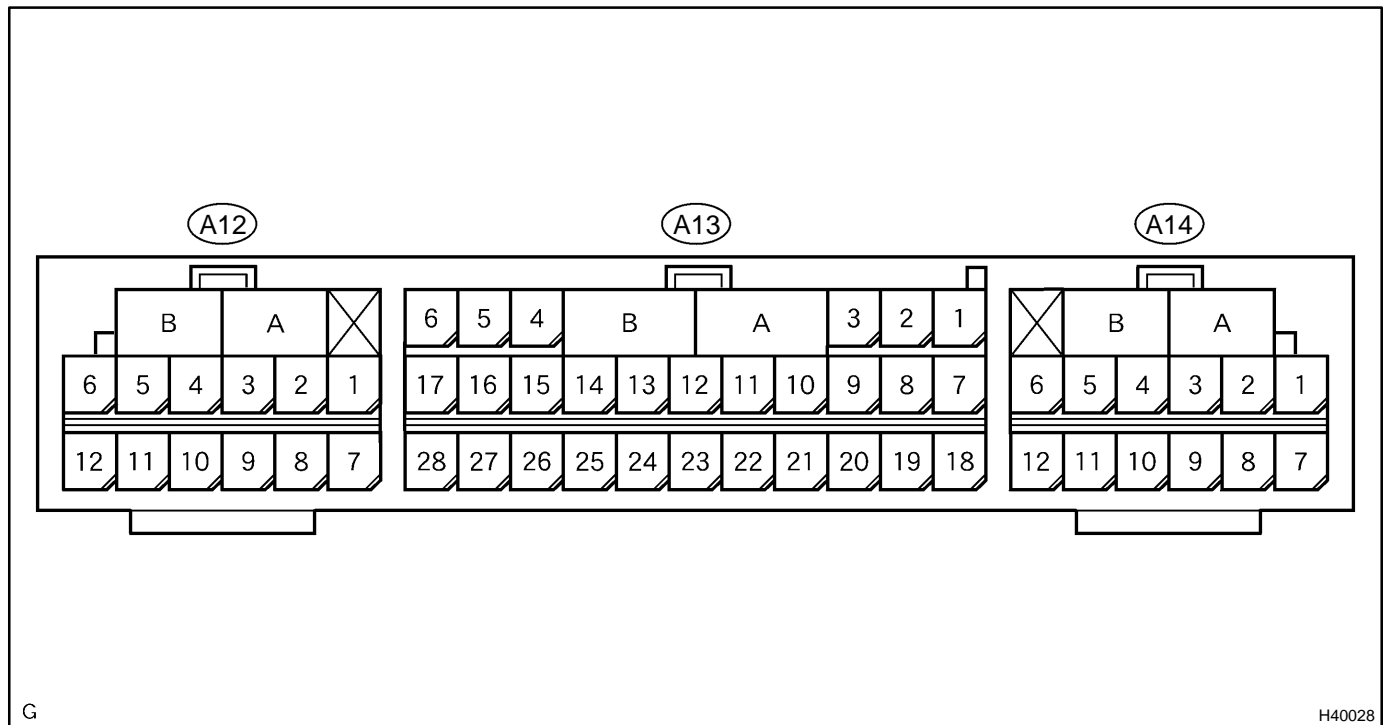

G

H40028

No.	Symbol	Terminal Name
A	-	Electrical Connector Check Mechanism
B	-	Electrical Connector Check Mechanism
A13-3	LA	SRS Warning Light
A13-5	IG2	Power Source (IG2 Fuse)
A13-7	P2-	Squib (Passenger (2 step))
A13-8	P2+	Squib (Passenger (2 step))
A13-9	+SR	Front Airbag Sensor (RH)
A13-10	P+	Squib (Passenger)
A13-11	P-	Squib (Passenger)
A13-12	SIL	Diagnosis
A13-13	D-	Squib (Driver)
A13-14	D+	Squib (Driver)
A13-15	+SL	Airbag Front Sensor (LH)
A13-16	D2+	Squib (Driver (2 step))
A13-17	D2-	Squib (Driver (2 step))
A13-19	Tc	Diagnosis
A13-20	-SR	Airbag Front Sensor (RH)
A13-23	GSW2	ECM
A13-26	-SL	Airbag Front Sensor (LH)
A13-27	E1	Ground
A13-28	E2	Ground
A12-1	PL-	Squib (Seat Belt Pretensioner, LH)
A12-2	PL+	Squib (Seat Belt Pretensioner, LH)
A12-3	LSP+	Seat Position Sensor
A12-4	LSP-	Seat Position Sensor
A12-5	SFL-	Squib (Side, LH)
A12-6	SFL+	Squib (Side, LH)
A12-7	VUPL	Side Airbag Sensor Assy (LH)
A12-9	SSL-	Side Airbag Sensor Assy (LH)

## DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM (April, 2003)

No.	Symbol	Terminal Name
A12-10	FSL	Side Airbag Sensor Assy (LH)
A12-11	LBE+	Seat Belt Buckle Switch (LH)
A12-12	ESL	Side Airbag Sensor Assy (LH)
A14-1	SFR+	Squib (Side, RH)
A14-2	SFR-	Squib (Side, RH)
A14-5	PR+	Squib (Seat Belt Pretensioner, RH)
A14-6	PR-	Squib (Seat Belt Pretensioner, RH)
A14-7	ESR	Side Airbag Sensor Assy (RH)
A14-9	FSR	Side Airbag Sensor Assy (RH)
A14-10	SSR-	Side Airbag Sensor Assy (RH)
A14-12	VUPR	Side Airbag Sensor Assy (RH)