

SUPPLEMENTAL RESTRAINT SYSTEM (Apr., 2003)

HOW TO PROCEED WITH TROUBLESHOOTING

05256-15

The hand-held tester can be used at step 4, 6, 8 and 9.

1 VEHICLE BROUGHT TO WORKSHOP



 
2 CUSTOMER PROBLEM ANALYSIS (See page 05-423)




3 WARNING LIGHT CHECK (See page 05-424)



4 THE DTCs CHECK (Present and Past DTCs) (See page 05-424)



 DTCs IS OUTPUT (INCLUDING NORMAL SYSTEM CODE): Go to step 5




DTCs IS NOT OUTPUT: PROBLEM SYMPTOMS TABLE (See page 05-436)


5 THE DTCs CHART (See page 05-430)



 6 CIRCUIT INSPECTION (See page 05-437 to 05-579)



TROUBLE CODE IS OUTPUT: Go to step 7

 

NORMAL SYSTEM CODE IS OUTPUT: Go to step 11

7 REPAIR



8 CLEAR THE DTCs (Present and Past DTCs) (See page 05-424)



9 THE DTCs CHECK (Present and Past DTCs) (See page 05-424)

 **DTCs IS NOT OUTPUT: Go to step 10**

 **DTCs IS OUTPUT: Go to step 5**

10 SYMPTOM SIMULATION (See page 01-20)

 **WARNING LIGHT REMAINS OFF: Go to step 11**

 **WARNING LIGHT IS ON: Go to step 5**

11 CONFIRMATION TEST



END