



THE AMBIENT TEMPERATURE DOES NOT DISPLAY

WIRING DIAGRAM

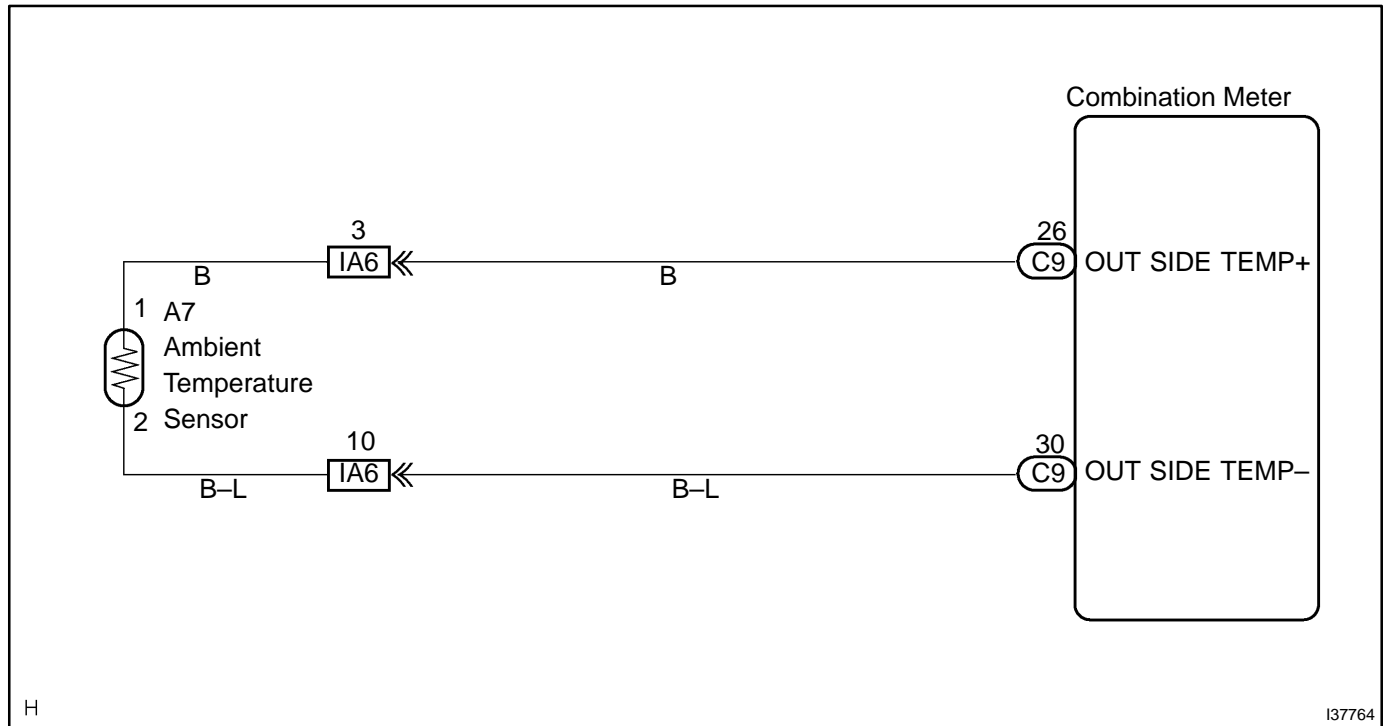

INSPECTION PROCEDURE

1 INSPECT OUTER AMBIENT TEMPERATURE SENSOR

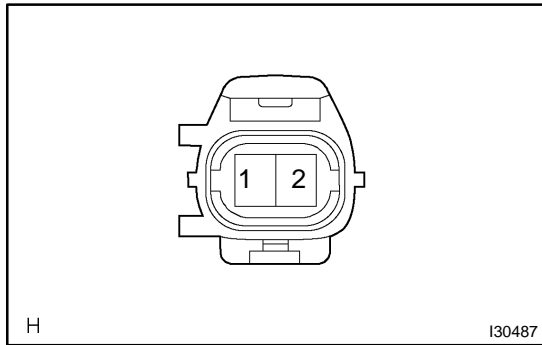

- (a) Remove cooler (ambient temp. sensor) thermistor.
- (b) Measure resistance between terminals 1 and 2 of cooler (ambient temp. sensor) thermistor connector at each temperature.

Resistance:


at 0 °C (0 °F) : 9.097 – 9.701 kΩ

at 25 °C (77 °F) : 2.725 – 2.865 kΩ

HINT:

As the temperature increases, the resistance decreases.

Resistance:

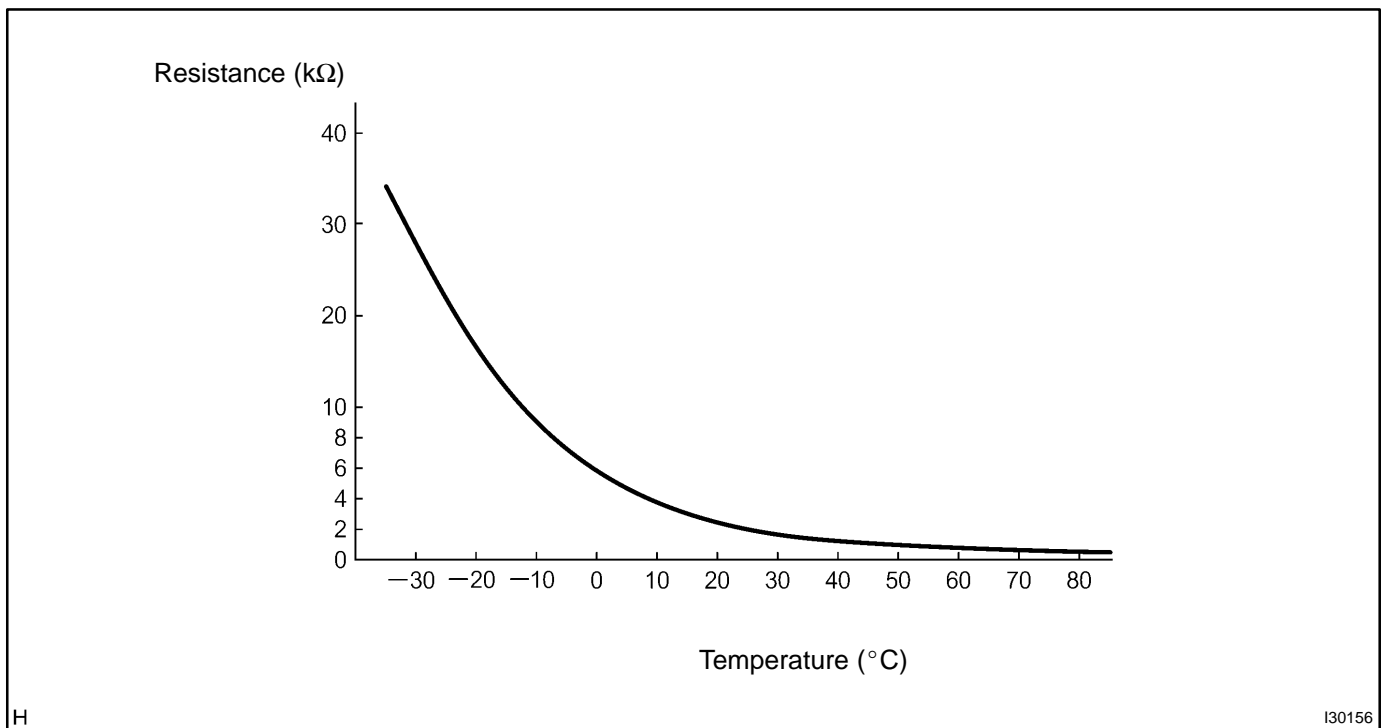

NG → **REPLACE OUTER AMBIENT TEMPERATURE SENSOR**

OK

2 CHECK HARNESS AND CONNECTOR

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE COMBINATION METER ASSY