




LOCATION

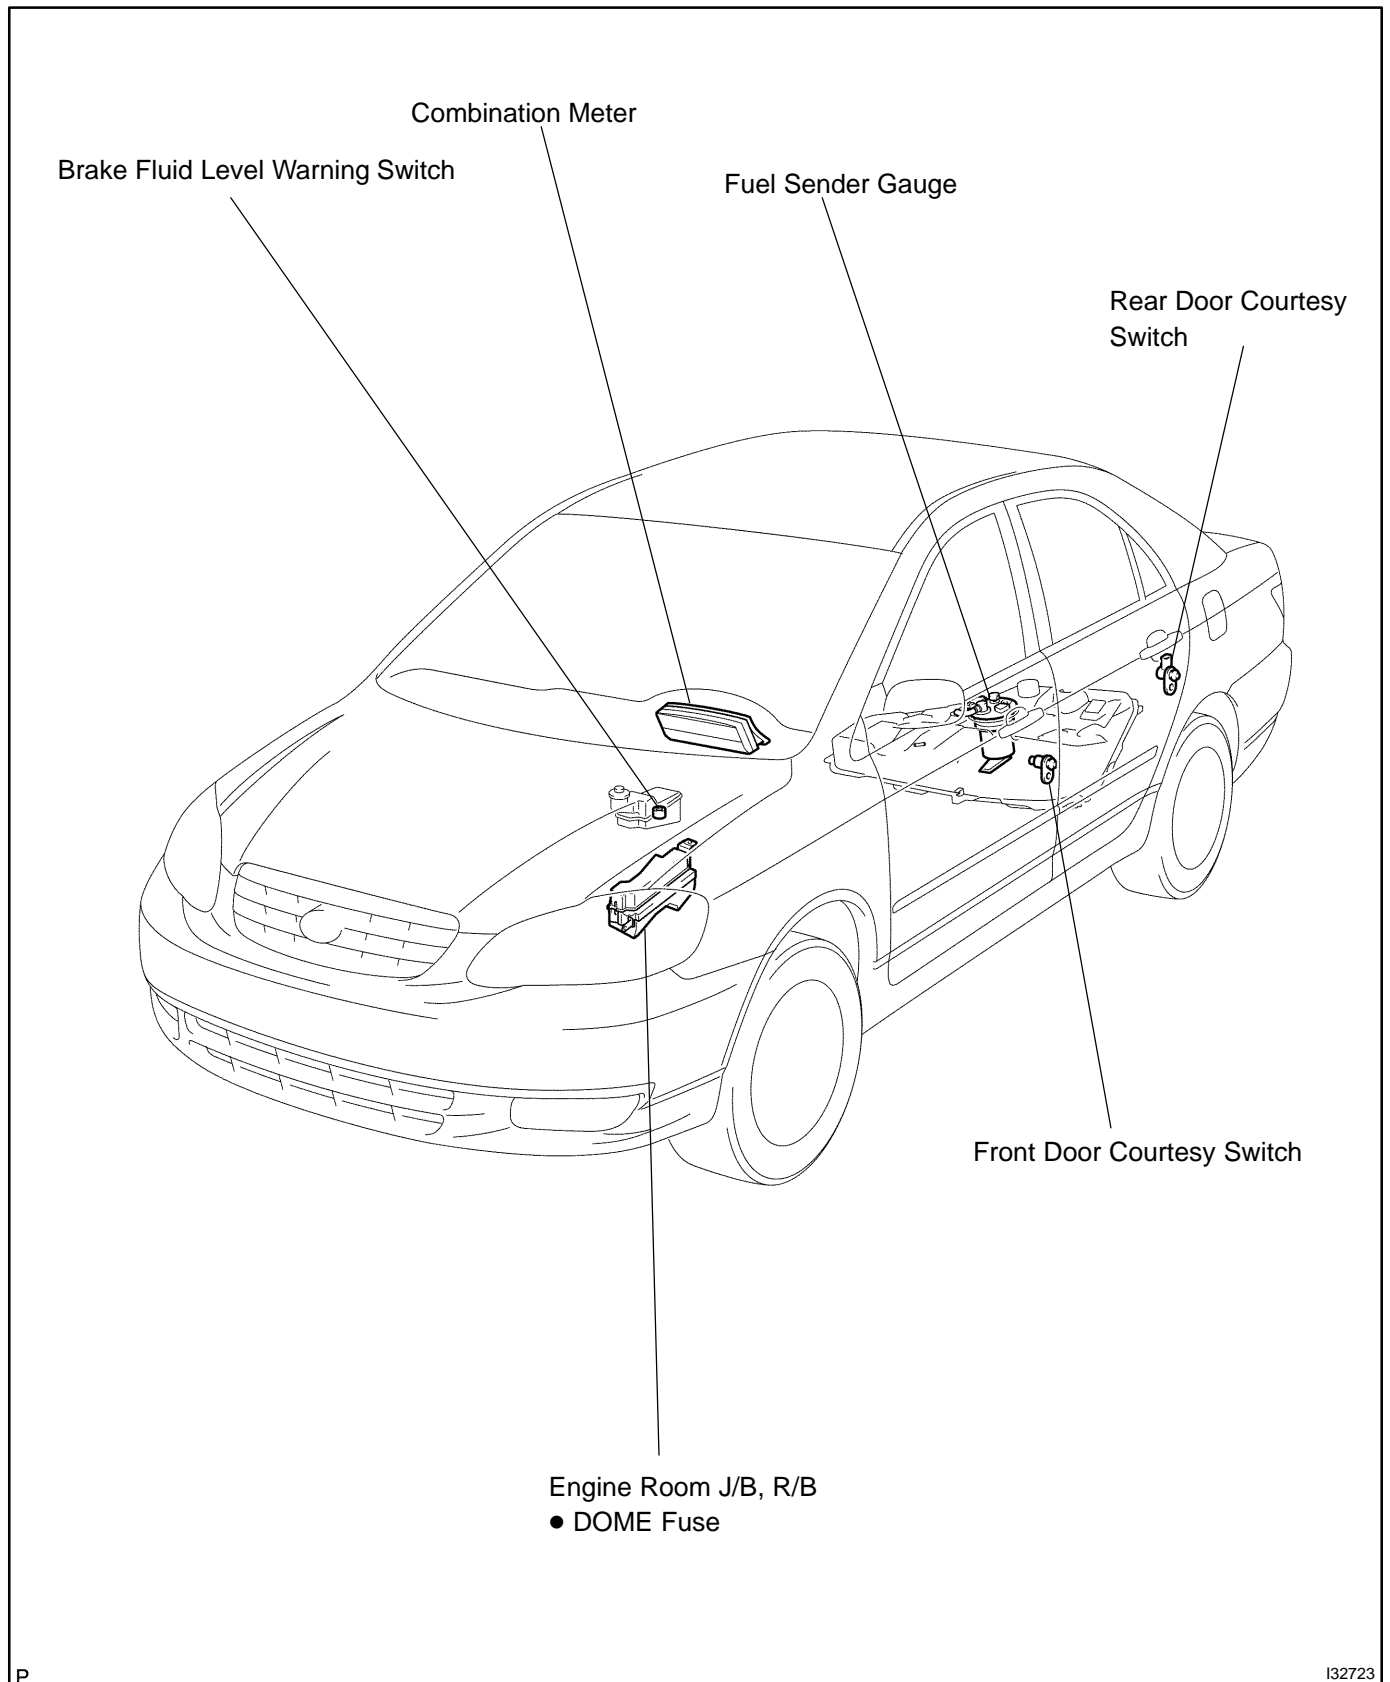

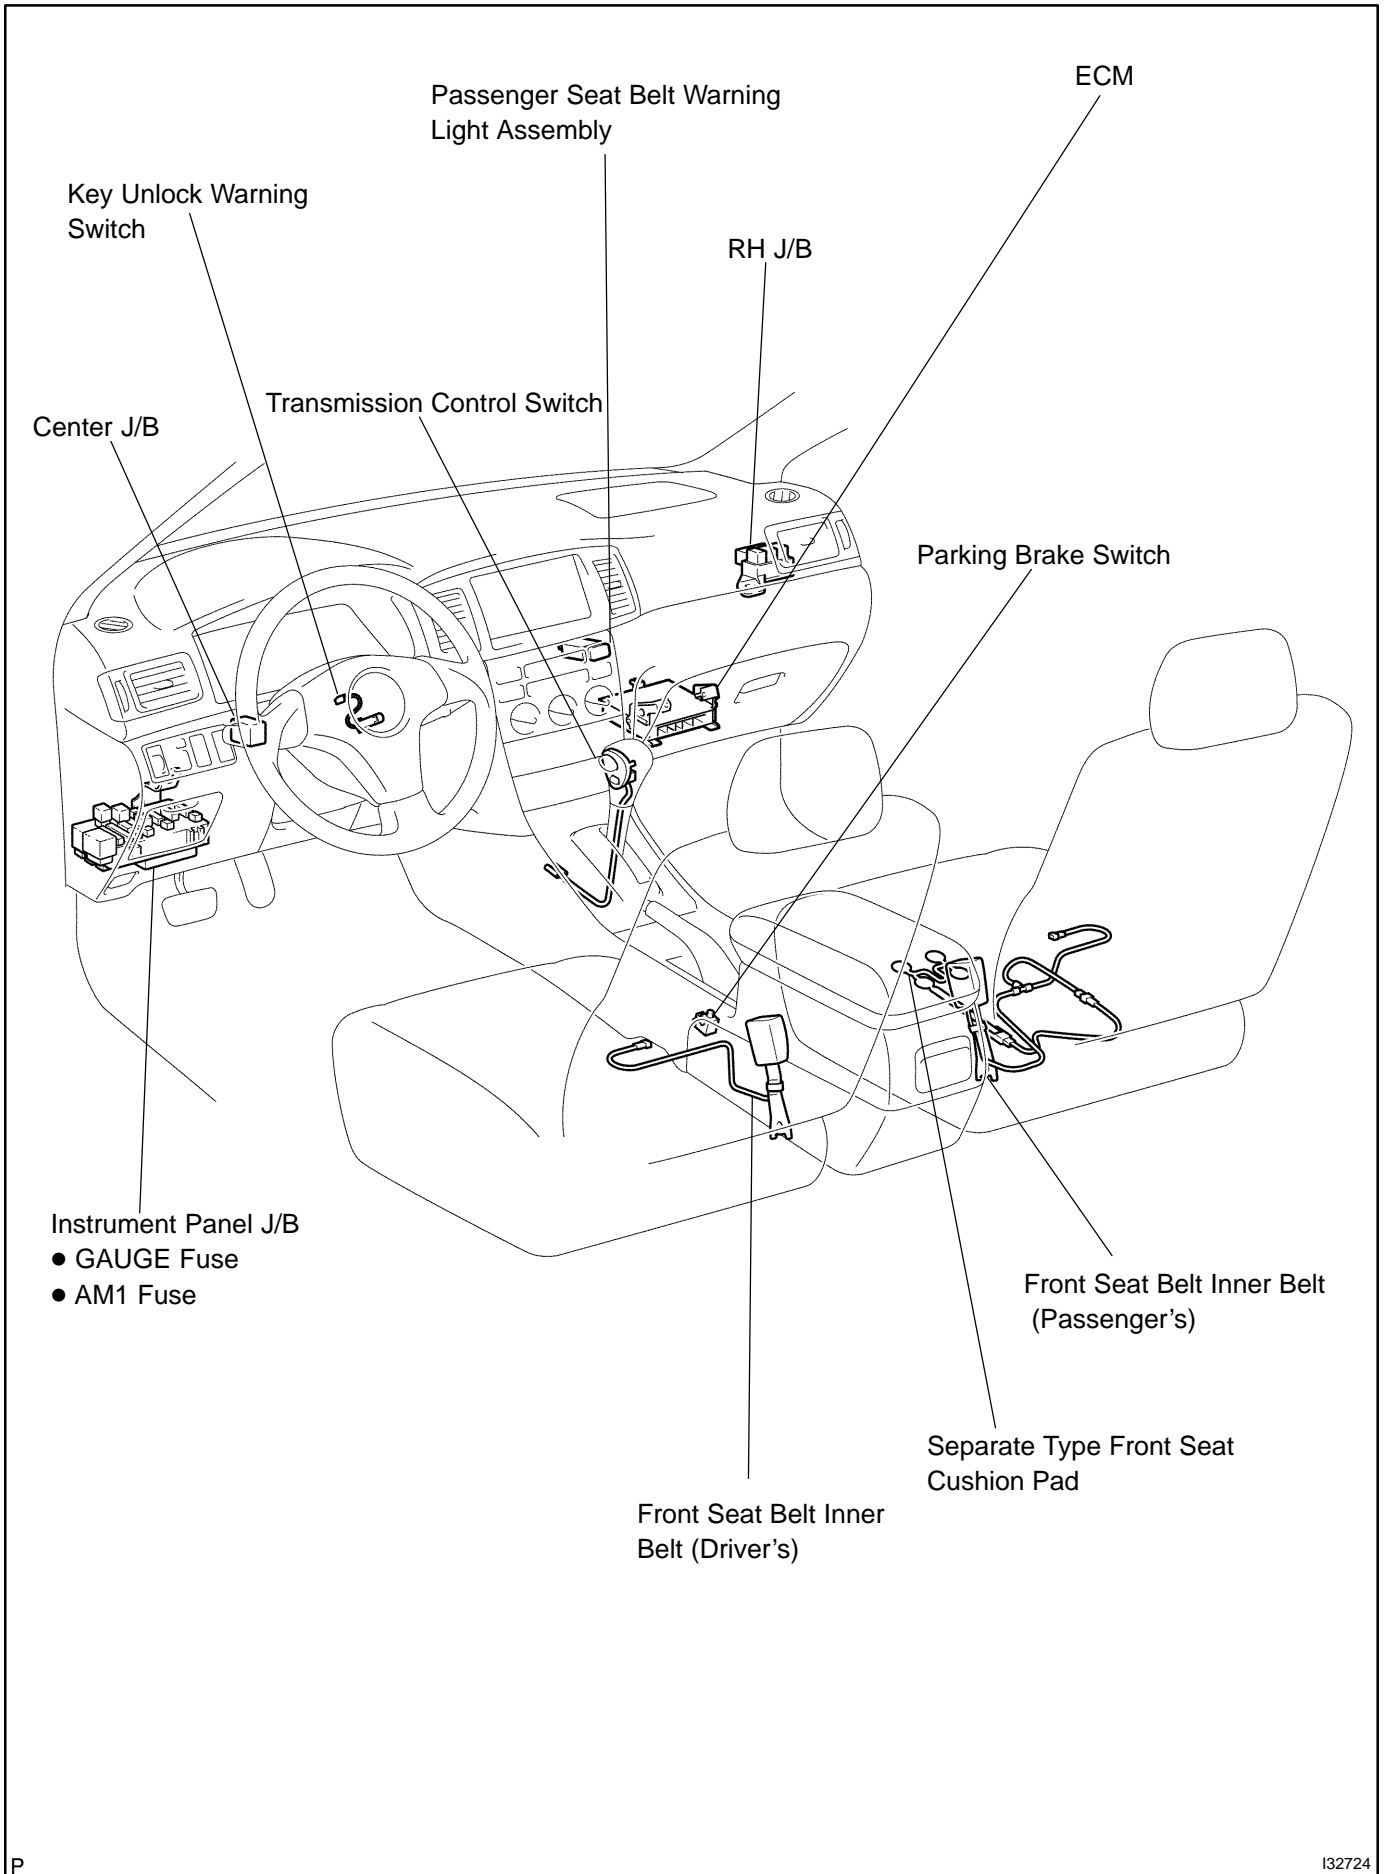


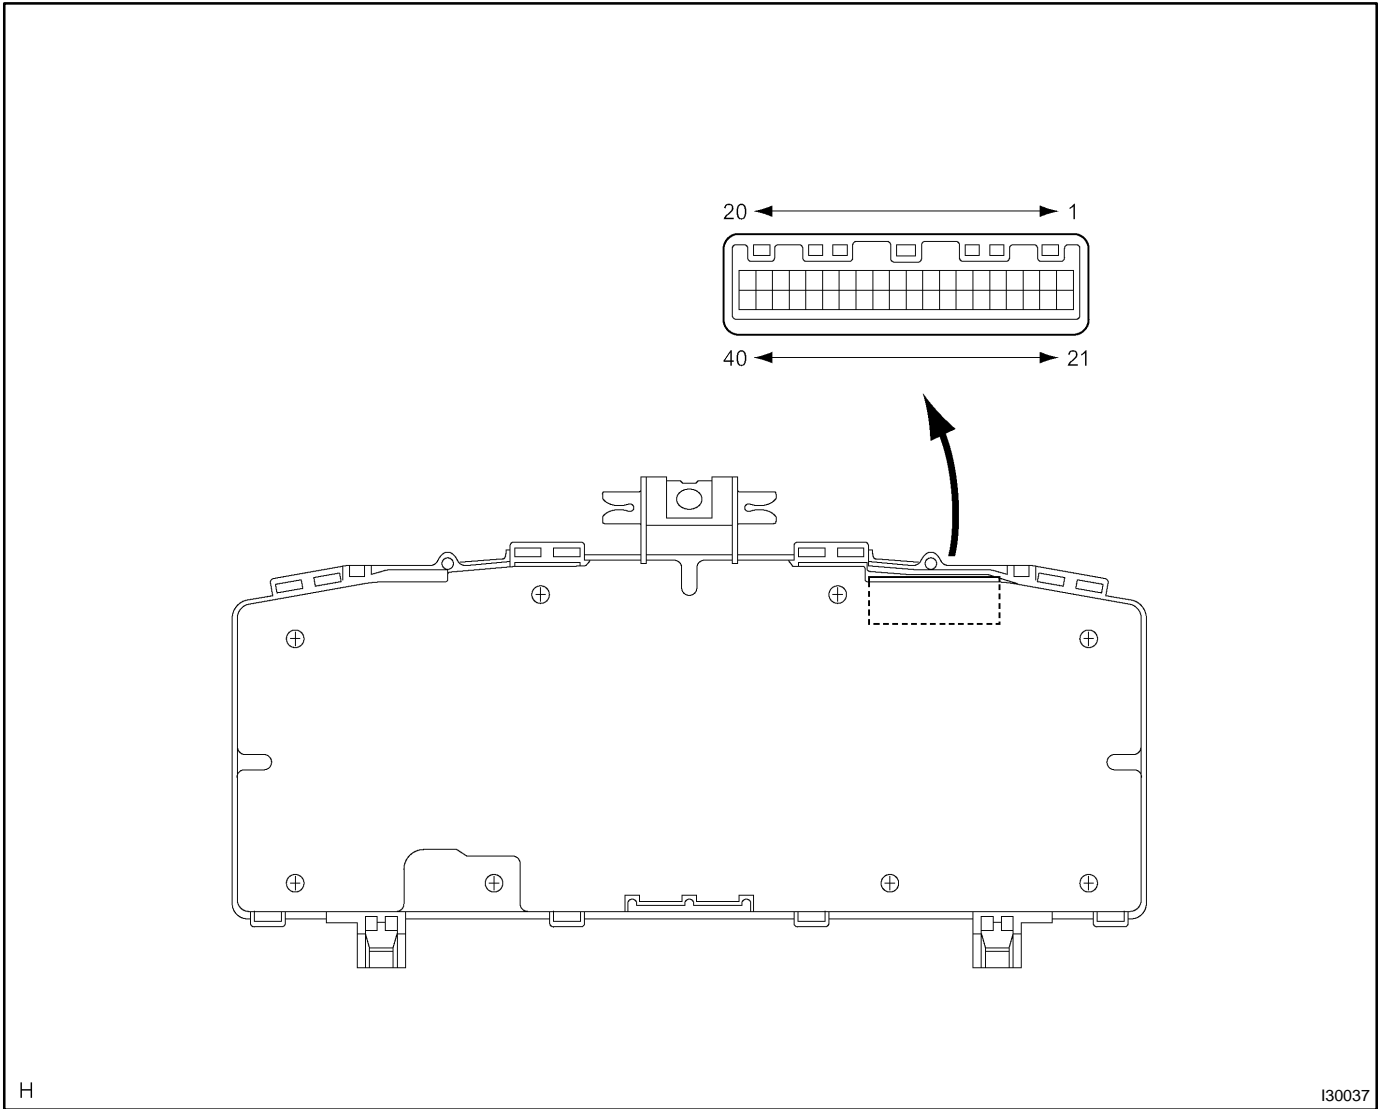

H

I30037

DIAGNOSTICS - COMBINATION METER

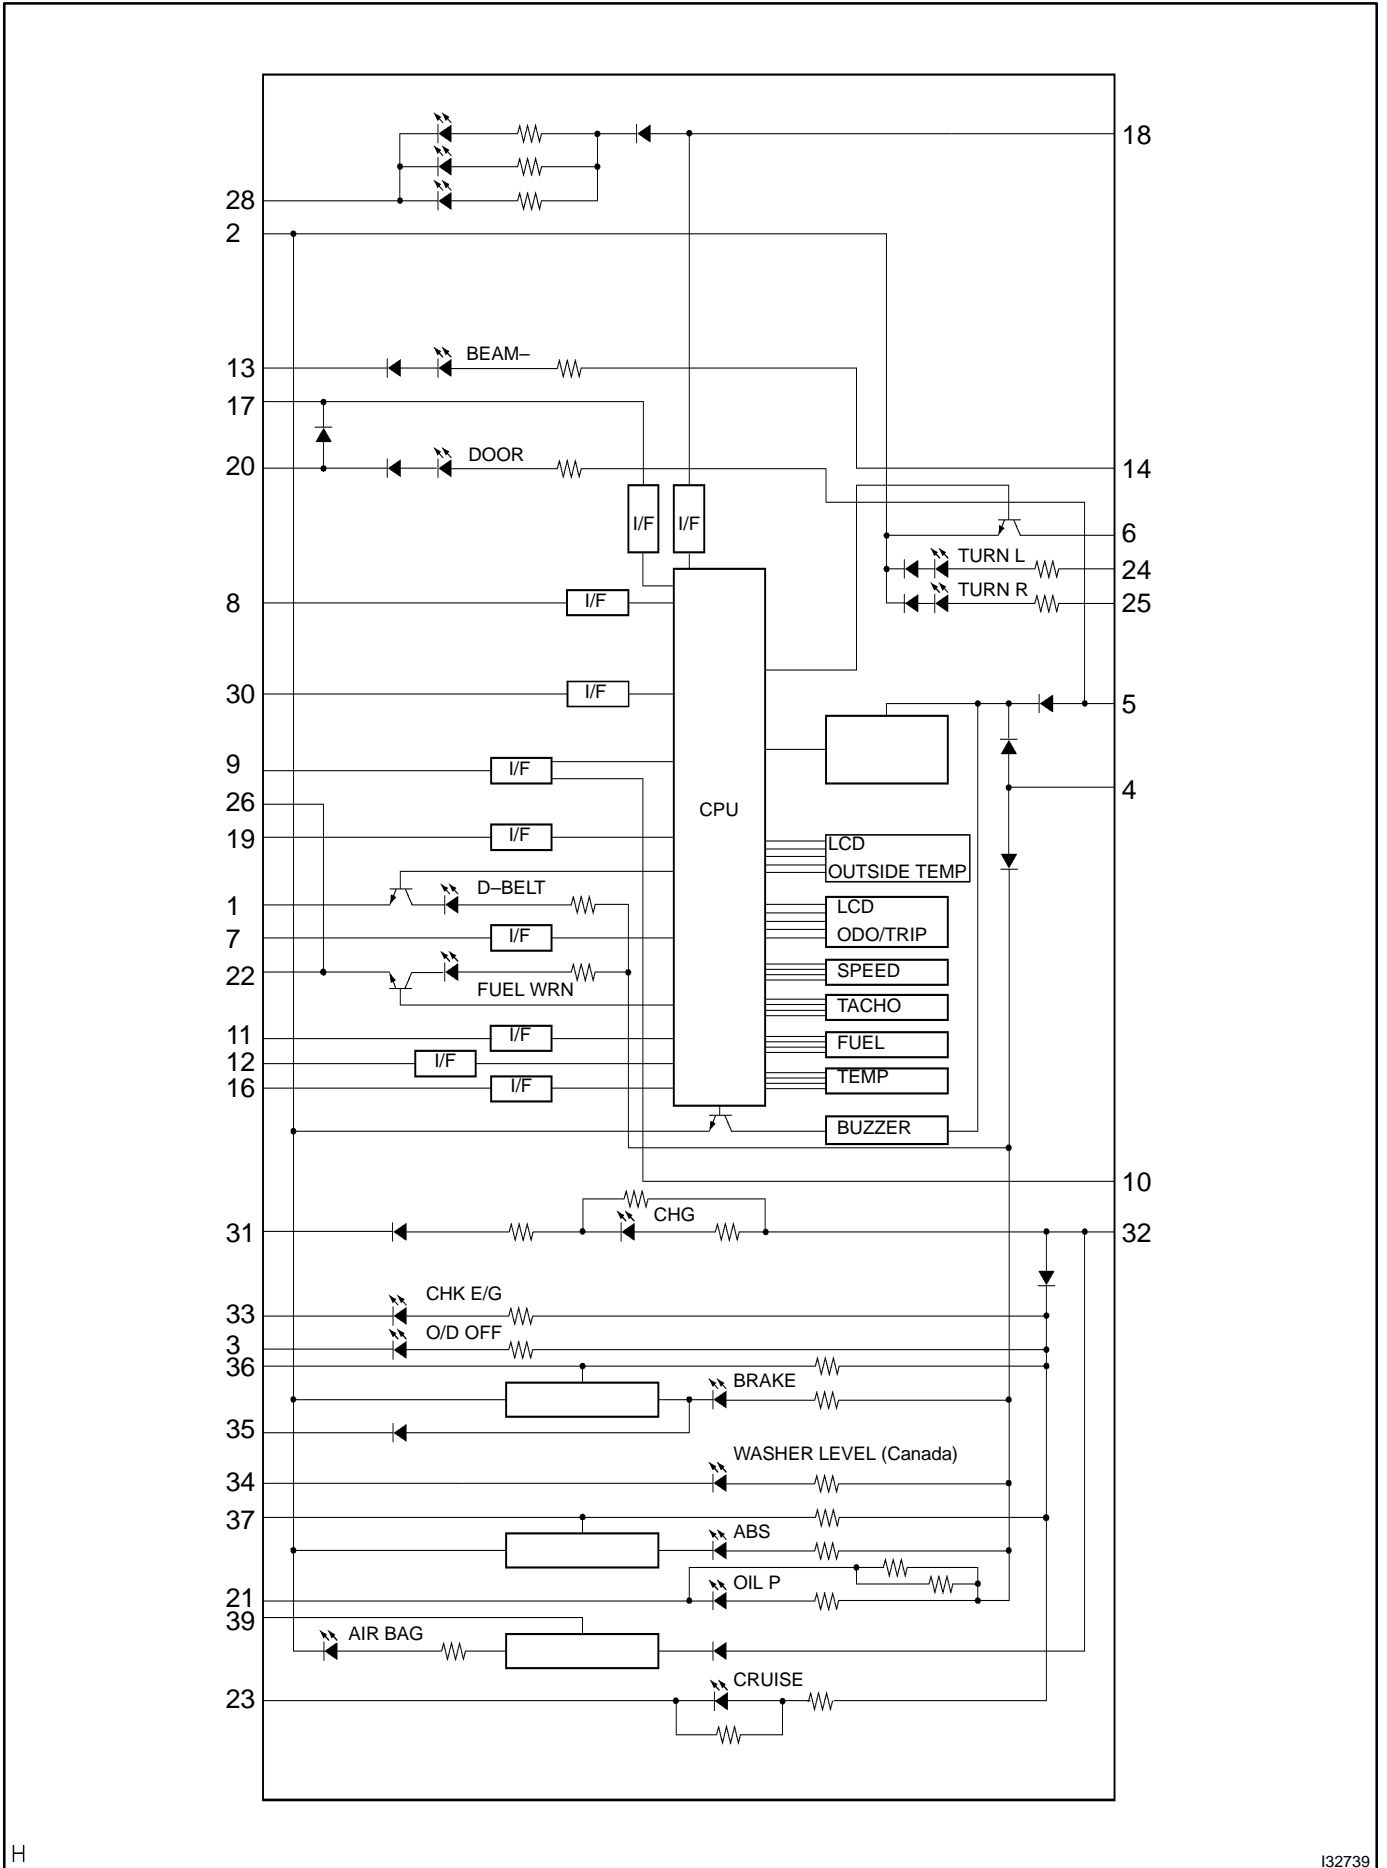

H

I32739

Terminal No.	Wire harness side	
C9	1	Ground (Signal Ground)
	2	Ground (Power Ground)
	3	ECM
	4	GAUGE Fuse
	5	DOME Fuse
	6	Front Passenger Seat Belt Warning Indicator
	7	Fuel sender gauge
	8	ECM
	9	Skid Control ECU (w/ ABS), Vehicle Speed Control Sensor (w/o ABS)
	10	Cruise Control ECU, ECM
	11	Buckle Switch RH
	12	Buckle Switch LH
	13	Ground
	14	HEAD RH UPR Fuse
	15	-
	16	Unlock Warning Switch
	17	Driver Side Courtesy Switch
	18	Tail Relay (USA), Combination Switch (Canada)
	19	ECM
	20	Except Driver Side Courtesy Switch
	21	Engine Oil Pressure Switch
	22	Fuel sender gauge
	23	Cruise Control ECU
	24	Turn Signal Flasher
	25	Turn Signal Flasher
	26	Ambient Temperature Sensor
	28	Rheostat
	30	Ambient Temperature Sensor
	31	Alternator
	32	GAUGE Fuse
	33	ECM
	34	Washer Level Sensor (Canada)
	35	Brake Fluid Level Warning Switch
	36	Skid Control ECU with Actuator (w/ ABS), Ground (w/o ABS)
	37	Skid Control ECU with Actuator (w/ ABS), Ground (w/o ABS)
	38	-
	39	Airbag Sensor Assembly
	40	-