

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Entire combination meter does not operate.	<ol style="list-style-type: none"> 3. Fuse 4. Wire-harness and connector 5. Combination meter assembly 	05-648
Malfunction in speed meter.	<ol style="list-style-type: none"> 1. Brake system 2. Wire-harness and connector 3. Combination meter assembly 	05-650
Malfunction in tachometer.	<ol style="list-style-type: none"> 1. ECM 2. Wire-harness and connector 3. Combination meter assembly 	05-653
Malfunction in fuel receiver gauge.	<ol style="list-style-type: none"> 1. Fuel sender gauge 2. Wire-harness and connector 3. Combination meter assembly 	05-655
Malfunction in water temperature gauge.	<ol style="list-style-type: none"> 1. ECM 2. Wire-harness and connector 3. Combination meter assembly 	05-657
"Key unlock warning buzzer" or "Light auto turn off warning buzzer" does not operate.	<ol style="list-style-type: none"> 1. Front door courtesy switch 2. Key unlock warning switch 3. Wire-harness and connector 4. Combination meter assembly 	05-659
Driver seat belt warning buzzer does not sound.	<ol style="list-style-type: none"> 1. Driver seat belt buckle switch 2. Wire-harness and connector 3. Combination meter assembly 	05-663
Seat belt warning lamp for front passenger seat does not flash.	<ol style="list-style-type: none"> 1. Front seat inner belt assembly 2. Separate type front seat cushion pad 3. Combination meter assembly 4. Passenger seat belt warning light assembly 	05-663
Malfunction in clock.	<ol style="list-style-type: none"> 1. Fuse 2. Wire-harness and connector 3. Clock assembly 	05-666
The ambient temperature does not display.	<ol style="list-style-type: none"> 1. Fuse 2. Wire-harness and connector 3. Ambient temperature sensor 	05-668