


TERMINALS OF ECU

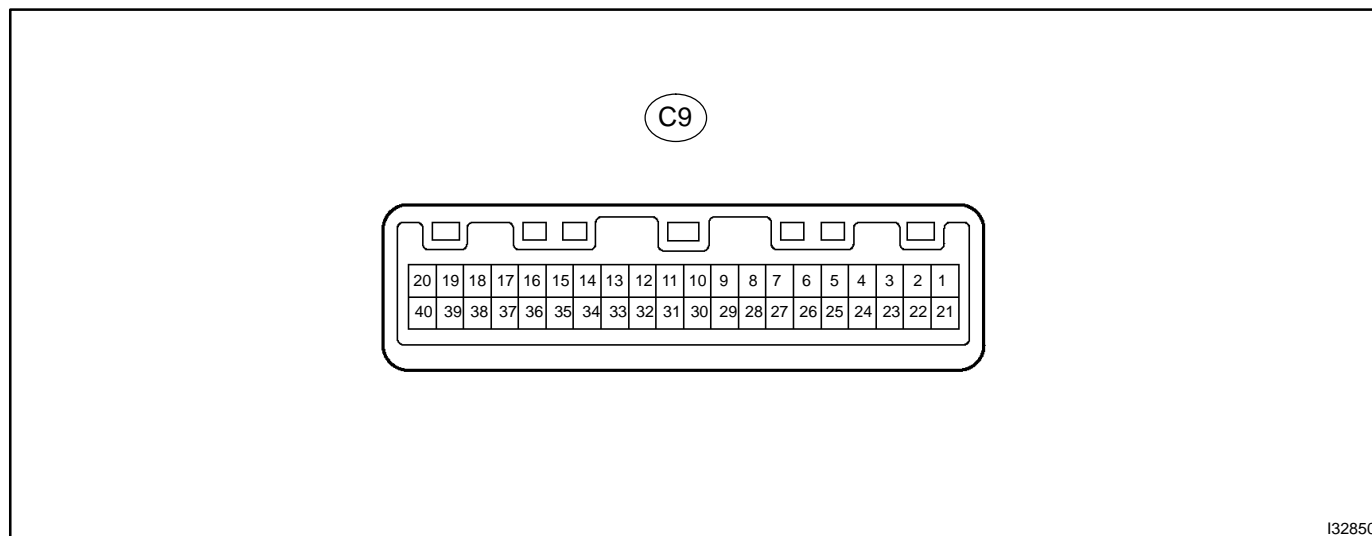

Terminals No. (Symbols)	Wiring Color	Condition	STD Voltage (V)
1 ↔ Body ground (SIGNAL EARTH ↔ Body ground)	BR	Constant	Continuity
2 ↔ Body ground (POWER EARTH ↔ Body ground)	W-B	Constant	Continuity
3 ↔ Body ground (O/D ↔ Body ground)	LG	O/D off indicator light ON → OFF	Below 1V → 10 - 14 V
4 ↔ Body ground (IG1+ ↔ Body ground)	R-W	Ignition switch OFF or ACC → ON	Below 1V → 10 - 14 V
5 ↔ Body ground (+B ↔ Body ground)	L-W	Constant	10 - 14 V
6 ↔ Body ground (P-BELT OUT ↔ Body ground)	L	Passenger seat belt warning ON → OFF	Below 1V ↔ 10 - 14 V
7 ↔ Body ground (FUEL ↔ Body ground)	Y	Fuel level is full → empty	Below 1V → 4 - 7 V
8 ↔ Body ground (TEMP ↔ Body ground)	Y-R	Ignition switch ON	Pulse generation
9 ↔ Body ground (SP IN ↔ Body ground)	W-G	Ignition switch ON and slowly turn drive wheel	Below 1 V ↔ 10 - 14 V
10 ↔ Body ground (4P OUT ↔ Body ground)	V-W	Ignition switch ON and slowly turn drive wheel	Below 1 V ↔ 10 - 14 V
11 ↔ Body ground (P BELT SW ↔ Body ground)	L-W	Ignition switch ON and passenger seat belt buckle switch ON (Belt unfastened)	Below 1 V
		Ignition switch ON and passenger seat belt buckle switch OFF (Belt fastened)	10 - 14 V
12 ↔ Body ground (D BELT SW ↔ Body ground)	G-Y	Ignition switch ON and driver seat belt buckle switch ON (Belt unfastened)	Below 1 V
		Ignition switch ON and driver seat belt buckle switch OFF (Belt fastened)	10 - 14 V
13 ↔ Body ground (BEAM- ↔ Body ground)	W-B	Hi beam indicator light ON → OFF	Below 1V → 10 - 14 V
14 ↔ Body ground (BEAM+ ↔ Body ground)	R	Constant	10 - 14 V

16 ↔ Body ground (KEY SW ↔ Body ground)	L-B	Ignition key inserted	Below 1 V
		No ignition key inserted	10 - 14 V
17 ↔ Body ground (D DOOR ↔ Body ground)	R-W	Driver door opened → closed	Below 1V → 10 - 14 V
18 ↔ Body ground (ILL+ ↔ Body ground)	G	Tail light switch OFF → ON	Below 1V → 10 - 14 V
19 ↔ Body ground (TACHO ↔ Body ground)	B	Engine running	Pulse generation
20 ↔ Body ground (EXCEPT D DOOR ↔ Body ground)	R	Passenger door opened → closed	Below 1V → 10 - 14 V
21 ↔ Body ground (OIL P ↔ Body ground)	W	Oil pressure warning light ON → OFF	Below 1V → 10 - 14 V
22 ↔ Body ground (FUEL EARTH ↔ Body ground)	BR	Constant	Continuity
23 ↔ Body ground (CRUISE ↔ Body ground)	G-R	Ignition switch ON and cruise indicator light ON → OFF	Below 1V → 10 - 14 V
24 ↔ Body ground (TURN L ↔ Body ground)	G-B	Left turn indicator light OFF → ON	Below 1V → 10 - 14 V
25 ↔ Body ground (TURN R ↔ Body ground)	G-Y	Right turn indicator light OFF → ON	Below 1V → 10 - 14 V
26 ↔ 30 (OUT SIDE TEMP+ ↔ OUT SIDE TEMP-)	B - B-L	Outside temperature at +25°C (77°F)	1.6 - 1.8KΩ
28 ↔ Body ground (ILL- ↔ Body ground)	W-R	Ignition switch On and light control rheostat volume minimum	No voltage
31 ↔ Body ground (CHG- ↔ Body ground)	Y	Discharge indicator light OFF → ON	Below 1V → 10 - 14 V
32 ↔ Body ground (IG2 ↔ Body ground)	B-O	Ignition switch OFF → ON	Below 1V → 10 - 14 V
33 ↔ Body ground (CHK ENG ↔ Body ground)	R-Y	Malfunction indicator light ON → OFF	Below 1V → 10 - 14 V
34 ↔ Body ground (WASHER LEVEL ↔ Body ground)	* L-W	Washer level indicator light ON → OFF	Below 1V → 10 - 14 V
35 ↔ Body ground (BRAKE LEVEL SW ↔ Body ground)	R-W	Ignition switch ON and brake fluid level warning light ON → OFF	Below 1V → 10 - 14 V
36 ↔ Body ground (EBD ↔ Body ground)	R	Brake warning light ON → OFF	4 - 8 V → Below 1V
37 ↔ Body ground (ABS ↔ Body ground)	W-R	ABS warning light ON → OFF	4 - 8 V → Below 1V
39 ↔ Body ground (A/B ↔ Body ground)	B-Y	A/B warning light ON → OFF	Below 1V → 6 - 11 V

*: Canada