

## PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the table below for each malfunction symptom and troubleshoot each circuit.

HINT:

Troubleshooting of the TVIP system is based on the premise that the door lock control system and wireless door lock control system is operating normally. Accordingly, before troubleshooting the TVIP system, first make certain that the door lock control system and wireless door lock control system is operating normally.

Symptom	Suspected Area	See page
TVIP system cannot be set	<ol style="list-style-type: none"> <li>1. Indicator light circuit</li> <li>2. ECU power source circuit</li> <li>3. Key unlock warning switch circuit</li> <li>4. Door key lock and unlock switch circuit</li> <li>5. Door unlock detection switch circuit</li> <li>6. Door courtesy switch circuit</li> <li>7. TVIP ECU communication circuit</li> </ol>	<a href="#">05-708</a> <a href="#">05-710</a> <a href="#">05-727</a> <a href="#">05-738</a> <a href="#">05-736</a> <a href="#">05-733</a> <a href="#">05-740</a>
Indicator light does not blink when TVIP system is set.	<ol style="list-style-type: none"> <li>1. Indicator light circuit</li> </ol>	<a href="#">05-708</a>
TVIP system does not operate when front door is unlocked (when TVIP system is set).	<ol style="list-style-type: none"> <li>1. Door unlock detection switch circuit</li> </ol>	<a href="#">05-736</a>
TVIP system is not canceled when ignition key is turned to ON position (when TVIP system is set).	<ol style="list-style-type: none"> <li>1. Ignition switch circuit</li> <li>2. Key unlock warning switch circuit</li> </ol>	<a href="#">05-713</a> <a href="#">05-727</a>
TVIP system still operates when door is opened with key (when TVIP system is set).	<ol style="list-style-type: none"> <li>1. Door key lock and unlock switch circuit</li> <li>2. Door unlock detection switch circuit</li> </ol>	<a href="#">05-738</a> <a href="#">05-736</a>
Horns do not sound while TVIP system is in warning operation.	<ol style="list-style-type: none"> <li>1. Horn relay circuit</li> </ol>	<a href="#">05-716</a>
Headlights do not flash while TVIP system is in warning operation.	<ol style="list-style-type: none"> <li>1. Light control switch circuit</li> </ol>	<a href="#">05-719</a>
Hazard warning do not flash while TVIP system is in warning operation.	<ol style="list-style-type: none"> <li>1. Hazard warning switch circuit</li> </ol>	<a href="#">05-722</a>
Door is not locked while TVIP system is in warning operation.	<ol style="list-style-type: none"> <li>1. Door unlock detection switch circuit</li> </ol>	<a href="#">05-736</a>
TVIP system is still set even when rear door is open	<ol style="list-style-type: none"> <li>1. Door courtesy switch circuit</li> </ol>	<a href="#">05-733</a>
Horns sound even when TVIP system is not set.	<ol style="list-style-type: none"> <li>1. Horn relay circuit</li> </ol>	<a href="#">05-716</a>
Headlights stay on even when TVIP system is not set.	<ol style="list-style-type: none"> <li>1. Light control switch circuit</li> </ol>	<a href="#">05-719</a>
Hazard warning stays on even when TVIP system is not set.	<ol style="list-style-type: none"> <li>1. Hazard warning switch circuit</li> </ol>	<a href="#">05-722</a>