

# TOYOTA VEHICLE INTRUSION PROTECTION SYSTEM

## HOW TO PROCEED WITH TROUBLESHOOTING

057RT-01

Troubleshoot in accordance with the procedure on the following pages.

<b>1</b>	<b>VEHICLE BROUGHT TO WORKSHOP</b>
----------	------------------------------------



<b>2</b>	<b>CUSTOMER PROBLEM ANALYSIS CHECK AND SYMPTOM CHECK</b> (See page <a href="#">05-701</a> )
----------	--

- (a) Without applicable symptoms, proceed to "A".
- (b) With applicable symptoms, proceed to "B".

<b>B</b>	<b>Go to step 4</b>
----------	---------------------



 
<b>3</b>	<b>SYMPTOM SIMULATION</b>
----------	---------------------------



<b>4</b>	<b>PROBLEM SYMPTOMS TABLE (See page <a href="#">05-707</a>)</b>
----------	---

- (a) Without applicable symptoms, proceed to "A".
- (b) With applicable symptoms, proceed to "B".

<b>B</b>	<b>Go to step 5</b>
----------	---------------------



<b>5</b>	<b>CIRCUIT INSPECTION AND PART INSPECTION (See page <a href="#">05-707</a>)</b>
----------	---



<b>6</b>	<b>PERFORM TROUBLESHOOTING IN THE FOLLOWING METHOD, DEPENDING ON MALFUNCTION SYMPTOM</b>
----------	--

- (a) Terminals of ECU (See page [05-703](#))
- (b) On-vehicle inspection (See page [73-14](#))

<b>7</b>	<b>ADJUSTMENT, REPAIR OR REPLACEMENT</b>
----------	--



<b>8</b>	<b>CONFIRMATION TEST</b>
----------	--------------------------



<b>END</b>
------------