


# FAN AND GENERATOR V BELT REPLACEMENT

1400D-01

## 1. REMOVE ENGINE UNDER COVER RH

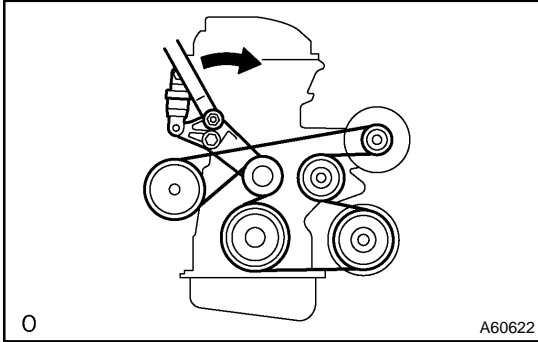

## 2. REMOVE FAN AND GENERATOR V BELT

- (a) Turn the V-ribbed belt tensioner slowly clockwise and loosen it. Then, remove the fan and generator V belt and put back the V-ribbed belt tensioner little by little and fix it quietly.