

RADIATOR ASSY

160CC-02

REPLACEMENT

1. **DRAIN COOLANT**(See page 16-7)
2. **SEPARATE RADIATOR HOSE INLET**
3. **SEPARATE RADIATOR HOSE OUTLET**
4. **SEPARATE OIL COOLER INLET TUBE NO.1**
5. **SEPARATE OIL COOLER OUTLET TUBE NO.1**
6. **REMOVE RADIATOR ASSY**
 - (a) Disconnect the fan motor connector.
 - (b) Disconnect two clamps for wire-harness from fan-shroud.
 - (c) Remove the two fan mount bolts.
 - (d) Remove the fan w/motor.
7. **ADD COOLANT** (See page 16-7)
8. **CHECK ENGINE COOLANT LEAK** (See page 16-7)