


REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE ENGINE UNDER COVER RH

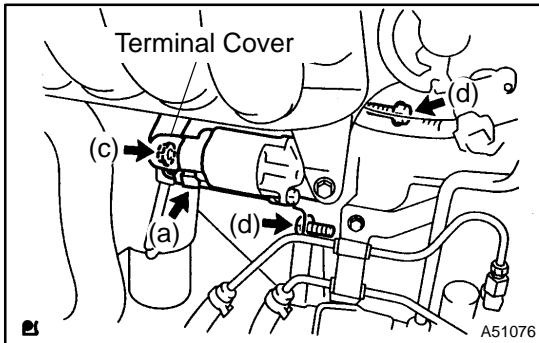

3. REMOVE STARTER ASSY
 - (a) Disconnect the starter connector.
 - (b) Open the terminal cover.
 - (c) Remove the nut, then disconnect the starter wire.
 - (d) Remove the 2 bolts, then remove the starter.

4. INSTALL STARTER ASSY

Torque:

37 N·m (378 kgf·cm, 27 ft·lbf) for bolt

9.8 N·m (100 kgf·cm, 7 ft·lbf) for nut

5. INSTALL ENGINE UNDER COVER RH
 6. CONNECT BATTERY NEGATIVE TERMINAL
- Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)