


REAR AXLE LH HUB BOLT REPLACEMENT

HINT:


COMPONENTS: See page 30-23

1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSY

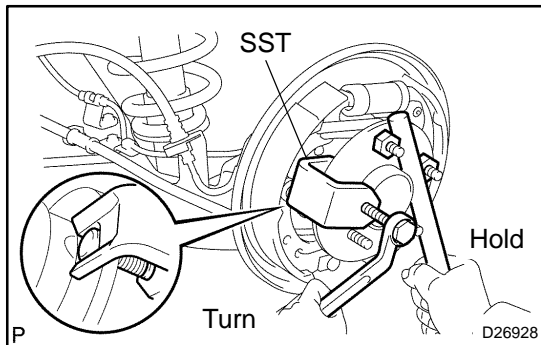

3. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST and a hammer handle or an equivalent, remove the LH hub bolt.
SST 09628-10011

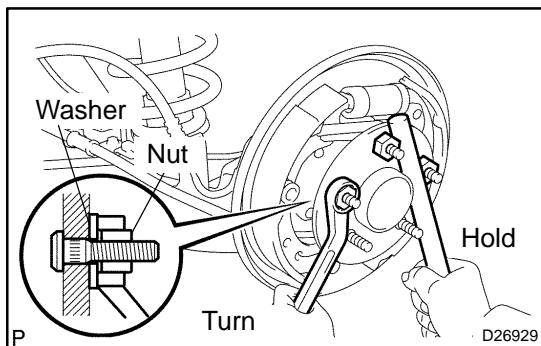

4. INSTALL REAR AXLE LH HUB BOLT

- (a) Install a washer and nut to a new LH hub bolt as shown in the illustration.
- (b) Using a hammer handle or an equivalent to hold the rear axle hub & bearing assy LH, install the LH hub bolt by tightening the nut.

5. INSTALL REAR BRAKE DRUM SUB-ASSY
6. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)