


ADJUSTMENT

1. REMOVE REAR WHEEL
2. ADJUST REAR DRUM BRAKE SHOE CLEARANCE (See page 32-31)
3. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
4. INSPECT PARKING BRAKE LEVER TRAVEL
 - (a) Pull the parking brake lever to the fully applied position, and count the number of clicks.
Parking brake lever travel: 6 – 9 clicks at 196 N (20 kgf, 44.1 lbf)
5. ADJUST PARKING BRAKE LEVER TRAVEL
 - (a) Remove the rear console box sub-assy (See page 71-10).

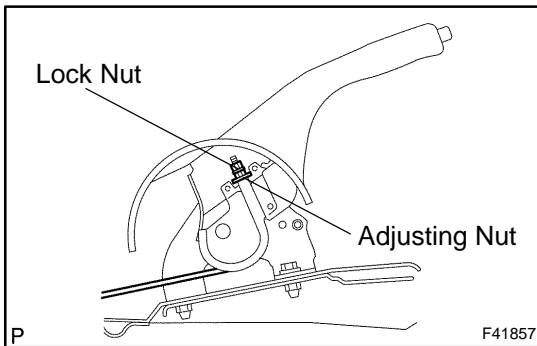

- (b) Loosen the lock nut and turn the adjusting nut until the lever travel turns correct.
- (c) Tighten the lock nut.
Torque: 5.0 N·m (55 kgf·cm, 44 in·lbf)
- (d) Install the rear console box sub-assy.