



REPLACEMENT

1. REMOVE CONSOLE BOX SUB-ASSY REAR (See page 71-10)
2. REMOVE PARKING BRAKE LEVER SUB-ASSY (See page 33-4)
3. REMOVE EXHAUST PIPE ASSY FRONT (See page 15-2)

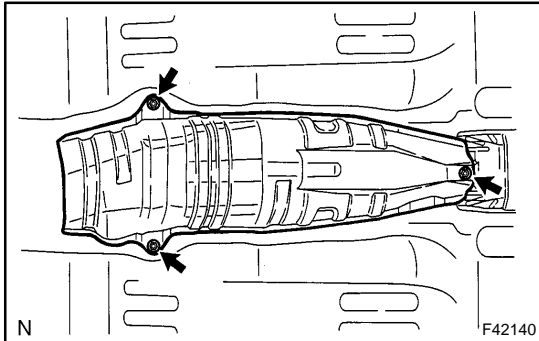

4. REMOVE FRONT FLOOR HEAT INSULATOR NO.1

- (a) Remove the 3 nuts and front floor insulator No.1.

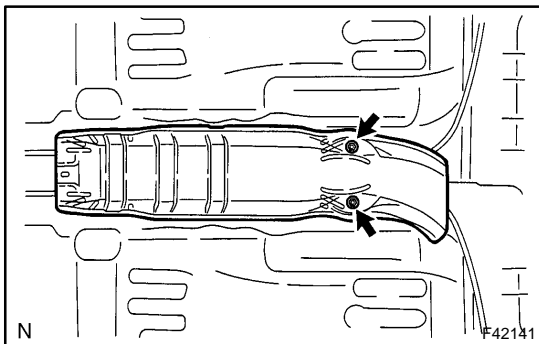

5. REMOVE FRONT FLOOR HEAT INSULATOR NO.2


- (a) Remove the 2 nuts and front floor insulator No.2.

6. REMOVE PARKING BRAKE CABLE ASSY NO.1

- (a) Disconnect the parking brake cable assy No.1 from the equalizer and remove the parking brake cable assy No.1.

7. INSTALL PARKING BRAKE CABLE ASSY NO.1


- (a) Connect the parking brake cable assy No.1 to the equalizer and install the parking brake cable assy No.1.

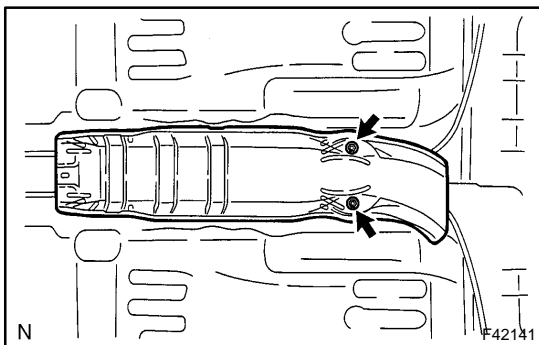

8. INSTALL FRONT FLOOR HEAT INSULATOR NO.2

- (a) Install the front floor insulator No.2 with the 2 nuts.

Torque: 5.5 N·m (55 kgf·cm, 48 in·lbf)

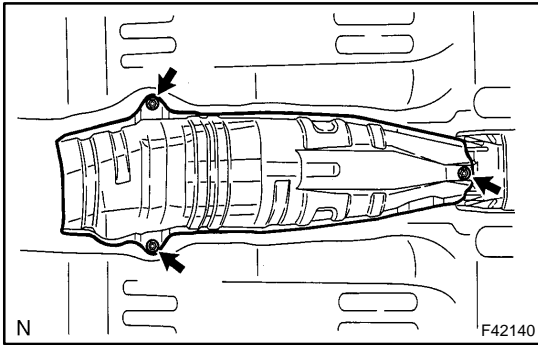**9. INSTALL FRONT FLOOR HEAT INSULATOR NO.1**

- (a) Install the front floor insulator No.1 with the 3 nuts.
Torque: 5.5 N·m (55 kgf·cm, 48 in.-lbf)

10. **INSTALL EXHAUST PIPE ASSY FRONT (See page 15-2)**
11. **INSTALL PARKING BRAKE LEVER SUB-ASSY (See page 33-4)**
12. **INSPECT PARKING BRAKE LEVER TRAVEL (See page 33-2)**
13. **ADJUST PARKING BRAKE LEVER TRAVEL (See page 33-2)**
14. **INSTALL CONSOLE BOX SUB-ASSY REAR**