



REPLACEMENT

1. REMOVE CONSOLE BOX SUB-ASSY REAR (See page 71-10)

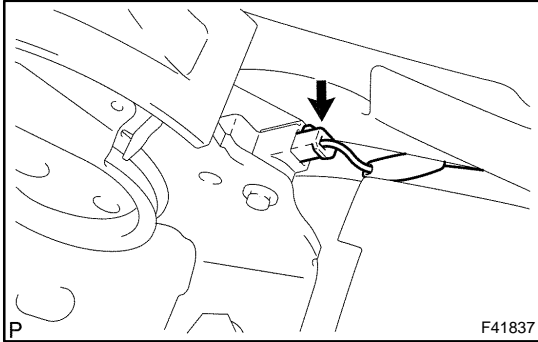


2. REMOVE PARKING BRAKE LEVER SUB-ASSY


- (a) Disconnect the parking brake switch connector from the parking brake switch.
- (b) Remove the lock nut and adjusting nut from the parking brake cable assy No.1.

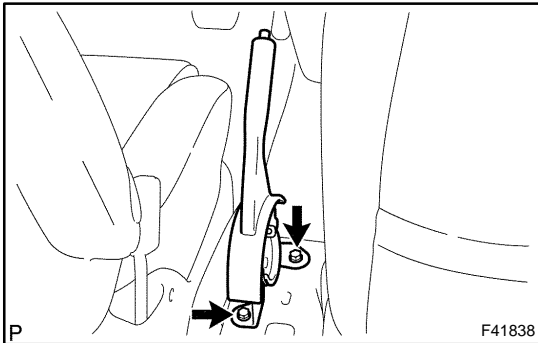

- (c) Remove the 2 bolts.

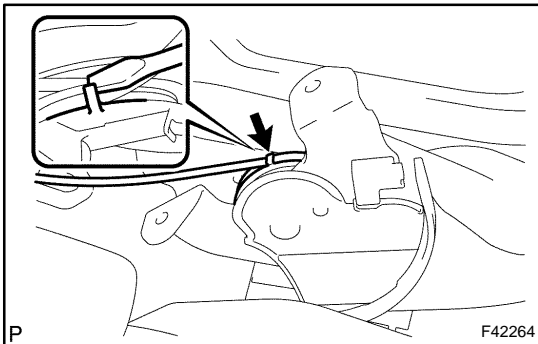


- (d) Using a screwdriver, raise the pick on the parking brake lever, and remove the parking brake cable assy No.1 from the parking brake lever.
- (e) Remove the parking brake lever from the body.

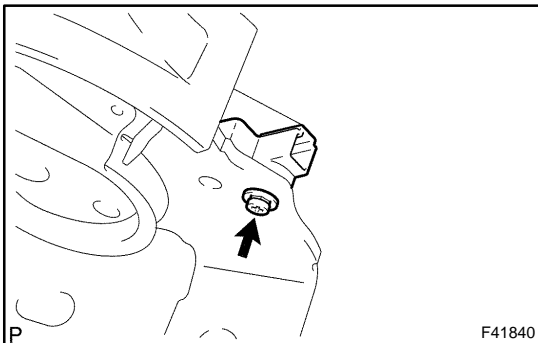


3. REMOVE PARKING BRAKE SWITCH ASSY

- (a) Remove the screw and parking brake switch assy.

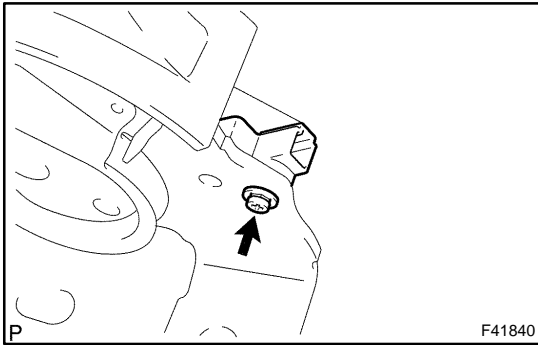


4. INSTALL PARKING BRAKE SWITCH ASSY

- (a) Install the parking brake switch to the parking brake lever sub-assy with the screw.

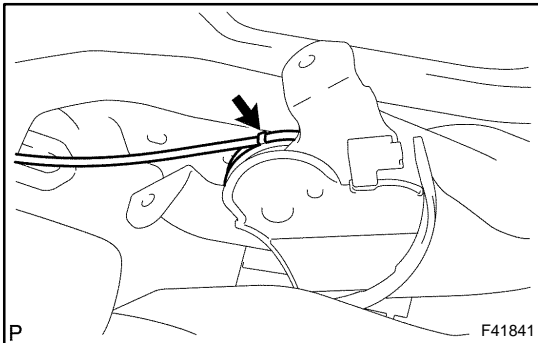


5. INSTALL PARKING BRAKE LEVER SUB-ASSY

- (a) Install the parking brake cable assy No.1 to the parking brake lever, temporarily tighten the adjusting nut and lock nut.
 (b) Using a screwdriver, fix the parking brake cable No.1 to the pick.

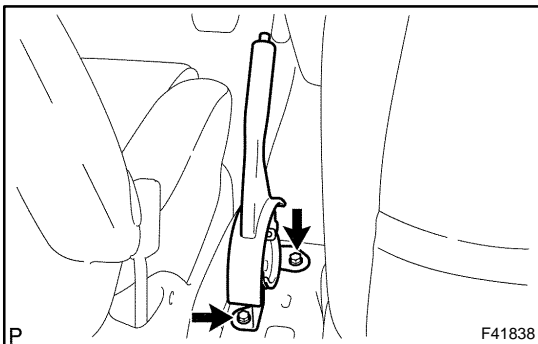

- (c) Install the parking brake lever with the 2 bolts.
Torque: 12.5 N·m (130 kgf·cm, 9 ft·lbf)

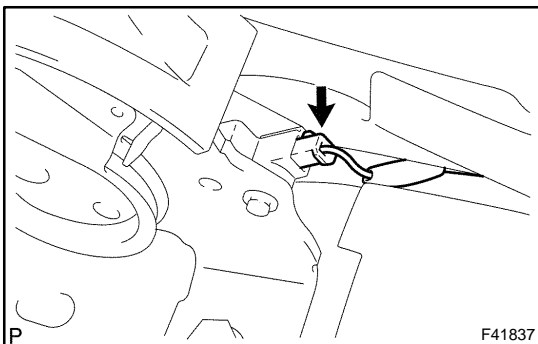

- (d) Connect the parking brake switch connector to the parking brake switch.

6. INSPECT PARKING BRAKE LEVER TRAVEL (See page 33-2)
 7. ADJUST PARKING BRAKE LEVER TRAVEL (See page 33-2)
 8. INSTALL CONSOLE BOX SUB-ASSY REAR