


FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT (ATM)

400LT-01


REPLACEMENT

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **REMOVE PARKING BRAKE HOLE COVER SUB-ASSY** (See page 71-10)
4. **REMOVE CONSOLE PANEL UPPER** (See page 71-10)
5. **REMOVE CONSOLE BOX CARPET** (See page 71-10)
6. **REMOVE CONSOLE BOX SUB-ASSY REAR** (See page 71-10)
7. **REMOVE AIR BAG SENSOR ASSY CENTER** (See page 60-38)
8. **DISCONNECT OXYGEN SENSOR CONNECTOR**
 - (a) Remove the foot rest.
 - (b) Pull up the floor carpet.
 - (c) Disconnect the oxygen sensor connector.
9. **REMOVE FLOOR PANEL BRACE FRONT**
 - (a) Remove the 2 nuts and floor panel brace.
10. **REMOVE EXHAUST PIPE ASSY FRONT** (See page 15-2)
11. **REMOVE FRONT FLOOR HEAT INSULATOR NO.1**
 - (a) Remove the 3 nuts and heat insulator.
12. **REMOVE AIR CLEANER CASE**
13. **REMOVE AIR CLEANER HOSE NO.1**

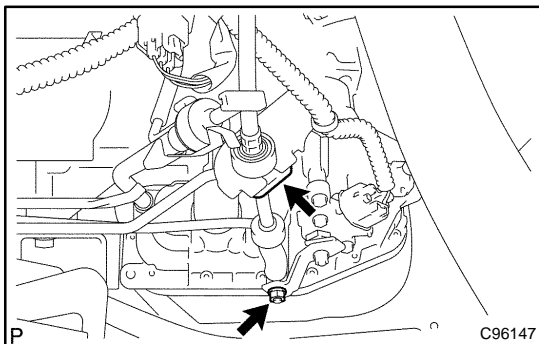


14. REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


- (a) Remove the nut from control shaft lever.
- (b) Disconnect the control cable from the control shaft lever.
- (c) Remove the clip and disconnect the control cable from the control cable bracket.
- (d) Disconnect the control cable from the control cable support.

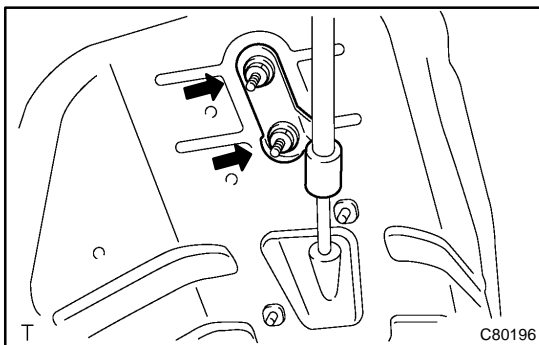


- (e) Remove the 2 nuts.

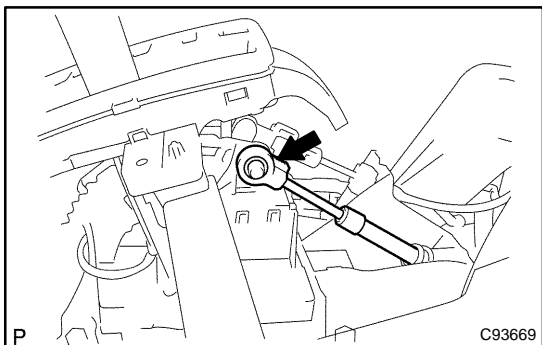


- (f) Remove the cable end from the rod of the floor shift assembly.

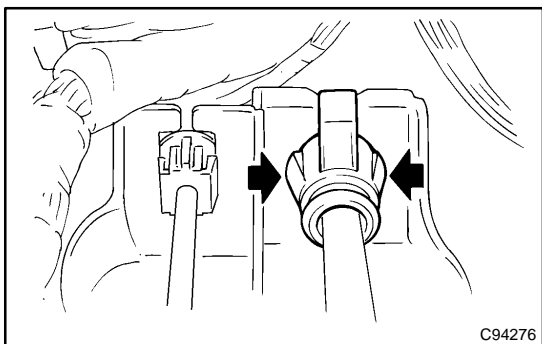

- (g) Using a screw driver, disconnect the control cable from the shift lever plate.

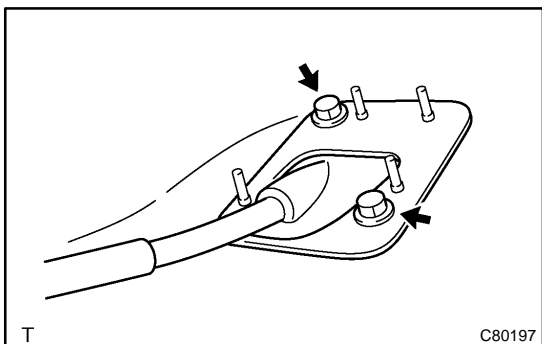


- (h) Remove the 2 bolts.
- (i) Pull out the control cable assy from the body.
- (j) Remove the retainer from the shift cable.

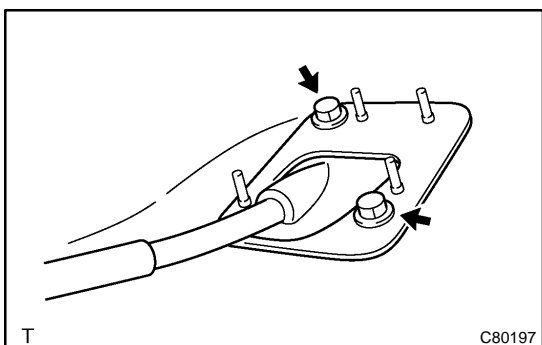


15. INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


- (a) Install the retainer to the shift cable.
 - (b) Pull in the control cable assy to the body.
 - (c) Install the 2 bolts.
- Torque: 5.0 N·m (50 kgf·cm, 43 in.-lbf)**

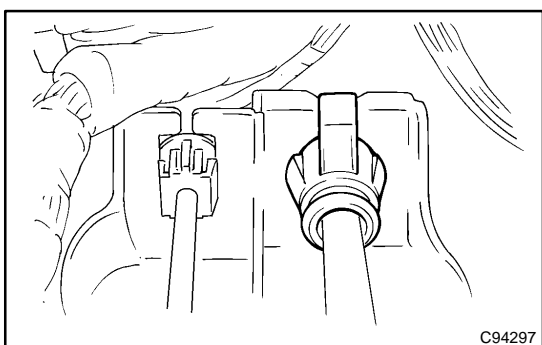


- (d) Install the control cable to the shift lever plate.

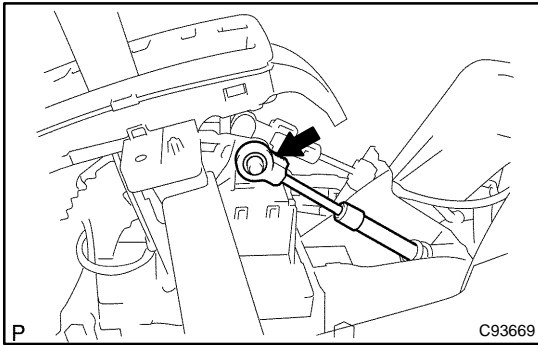

- (e) Install the cable end to the rod of the floor shift assy.
HINT:
Install it with the uneven surface facing upward.

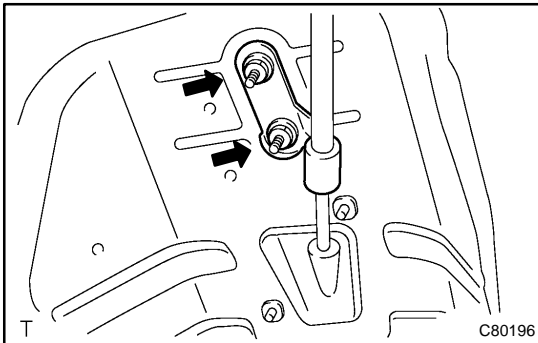

- (f) Install the control cable and 2 nuts.
Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)
(g) Connect the control cable to the control cable support.

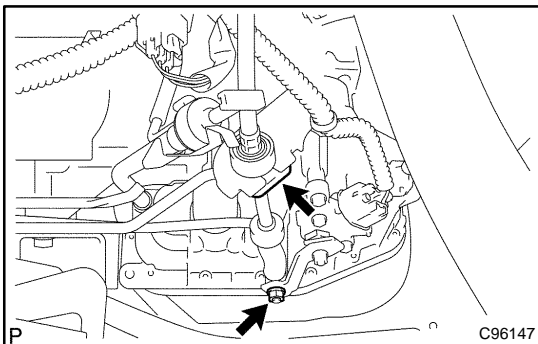

- (h) Temporarily install the control cable to the control shaft lever with the nut.
(i) Install the control cable and clip to the bracket.

16. INSTALL AIR CLEANER CASE

17. INSTALL FRONT FLOOR HEAT INSULATOR NO.1

- (a) Install the heat insulator with the 3 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

18. INSTALL EXHAUST PIPE ASSY FRONT (See page 15-2)

19. INSTALL FLOOR PANEL BRACE FRONT

- (a) Install the floor panel brace with the 2 nuts.
Torque: 29.6 N·m (302 kgf·cm, 22 ft·lbf)

20. INSTALL OXYGEN SENSOR CONNECTOR

- (a) Connect the oxygen sensor connector.
(b) Install the floor carpet and foot rest.

21. INSTALL AIR BAG SENSOR ASSY CENTER (See page 60-38)

22. ADJUST SHIFT LEVER POSITION (See page 40-44)

23. INSPECT SHIFT LEVER POSITION (See page 40-44)

24. INSPECT SRS WARNING LIGHT (See page 60-8)