


FLOOR SHIFT PARKING LOCK CABLE ASSY (ATM)

REPLACEMENT


400LU-02

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE HORN BUTTON ASSY** (See page 60-13)
5. **REMOVE STEERING WHEEL ASSY**
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
6. **REMOVE STEERING COLUMN COVER** (See page 50-8)
7. **REMOVE CONSOLE PANEL UPPER** (See page 71-10)
8. **REMOVE PARKING BRAKE HOLE COVER SUB-ASSY** (See page 71-10)
9. **REMOVE CONSOLE BOX CARPET** (See page 71-10)
10. **REMOVE CONSOLE BOX SUB-ASSY REAR** (See page 71-10)

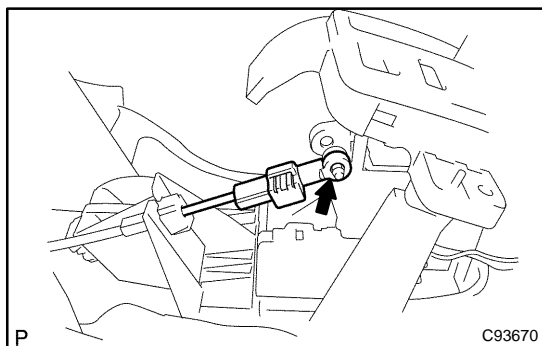


11. REMOVE FLOOR SHIFT PARKING LOCK CABLE ASSY


- (a) Remove the cable end from the lever pin of the floor shift assembly.

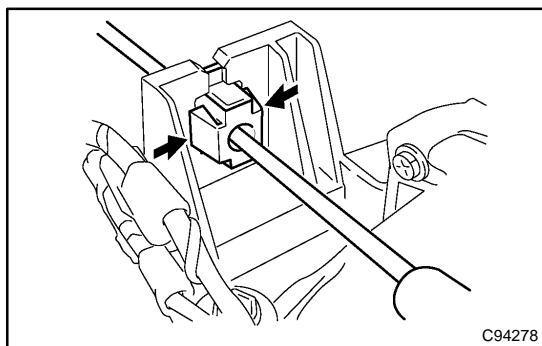

- (b) Using a screwdriver, disconnect the parking lock cable from the floor shift assembly.

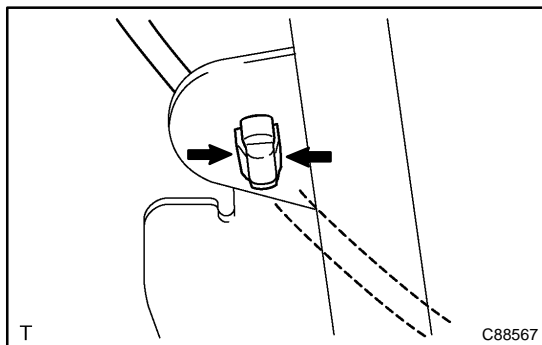


- (c) Disconnect the cable clamp.
- (d) Turn the ignition switch ACC or ON.

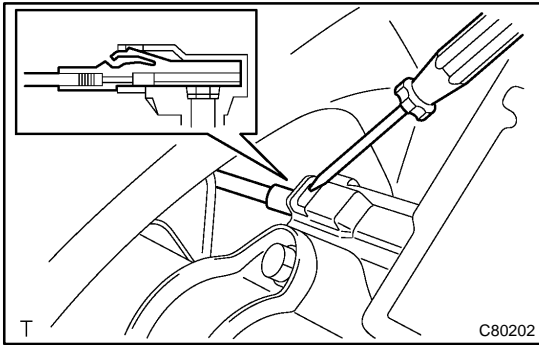

(e) Using a screwdriver, remove the cable from the upper bracket.

HINT:

Before disconnecting the cable, keep in mind each of the physical relationship between the connector and wire harness or other cables.

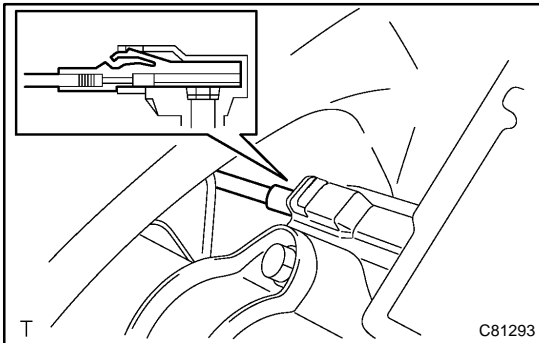


12. INSTALL FLOOR SHIFT PARKING LOCK CABLE ASSY


- (a) Turn the ignition switch ACC or ON.
- (b) Install the cable to the upper bracket.

HINT:

Connect the removed cable so that it will be the same physical relationship you kept in mind before its disconnection.

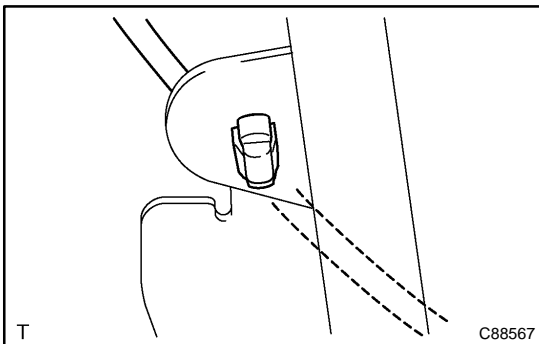


(c) Connect the cable clamp.

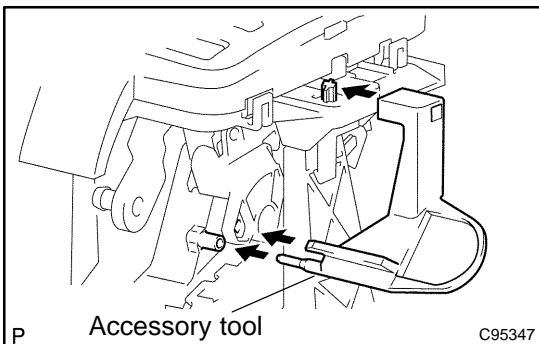


- (d) Set the accessory tool.
 - (1) Shift the shift lever to N position and turn the ignition switch to ACC or ON.
 - (2) Set the accessory tool to the shift lock control unit asy as shown in the illustration.


Accessory tool parts No.: 33693-02010

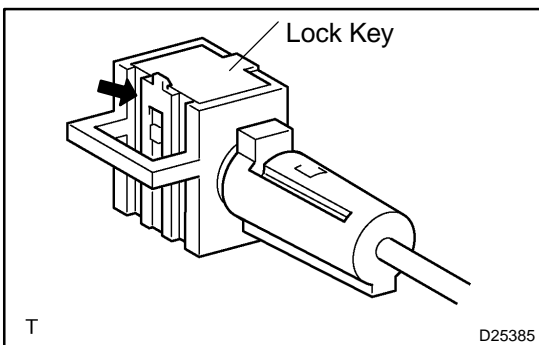

(e) Using a screwdriver, unlock the claw of the lock key of automatic adjustment part.

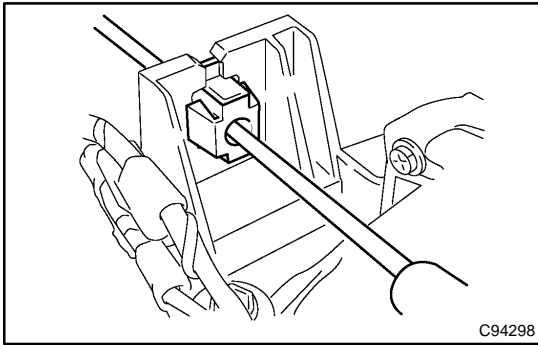


(f) Insert the slide cap into the through hole and install.

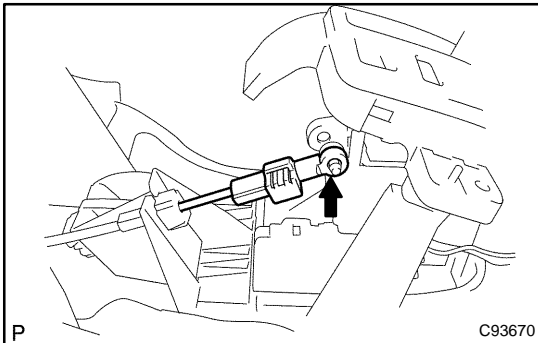

(g) Insert the lever pin into the hole in the cable end.

HINT:

Fit the claws securely.

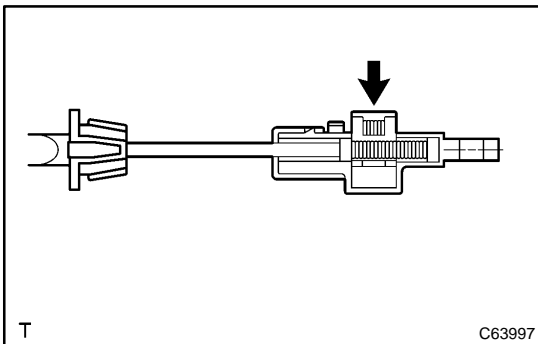

(h) Lock the lock key.

HINT:

At this time, the shift lever should be in N position and the ignition key should be set to ACC or ON.

(i) Remove the accessory tool.

Accessory tool parts No.: 33693-02010

13. **INSTALL STEERING WHEEL ASSY**
14. **INSPECT STEERING WHEEL CENTER POINT**
15. **INSTALL HORN BUTTON ASSY (See page 60-13)**
16. **INSPECT SRS WARNING LIGHT (See page 60-8)**
17. **CHECK KEY INTERLOCK OPERATION (See page 40-30)**