

# SPEEDOMETER SENSOR (ATM)


400LM-01

## REPLACEMENT

1. REMOVE AIR CLEANER CASE
2. REMOVE AIR CLEANER HOSE NO.1

### 3. REMOVE SPEEDOMETER SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and speedometer sensor assembly.

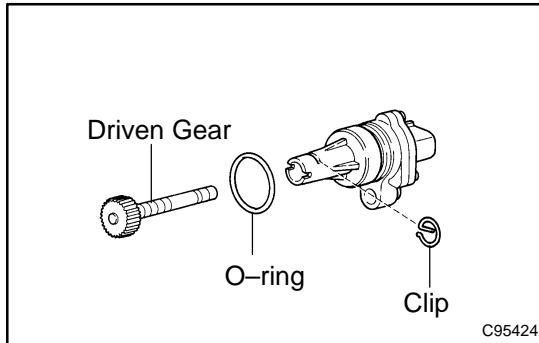

- (c) Remove the clip and driven gear from the speedometer sensor.

### 4. INSTALL SPEEDOMETER SENSOR

- (a) Coat a O-ring with ATF and install it to the speedometer sensor.
- (b) Install the driven gear to the speedometer sensor with the clip.
- (c) Install the speedometer sensor assembly with the bolt.  
**Torque: 11.3 N·m (115 kgf·cm, 9 ft·lbf)**
- (d) Connect the connector.

5. INSTALL AIR CLEANER HOSE NO.1
6. INSTALL AIR CLEANER CASE  
**Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)**