


# TRANSMISSION WIRE (ATM)

## REPLACEMENT


400LO-01

### 1. REMOVE TRANSMISSION VALVE BODY ASSY (See page 40-23)

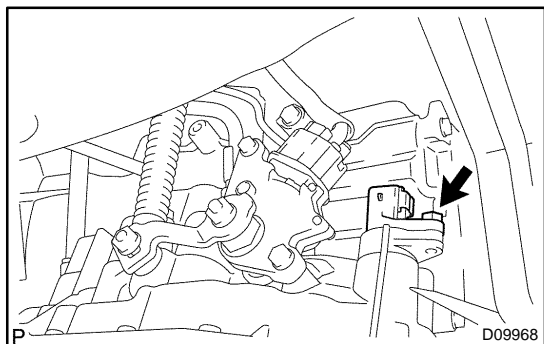

### 2. REMOVE TRANSMISSION WIRE

- (a) Disconnect the transmission wire connector.
- (b) Removal the bolt and transmission wire.

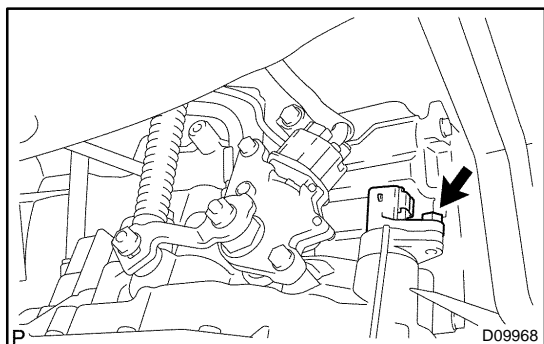

### 3. INSTALL TRANSMISSION WIRE

- (a) Coat a O-ring with ATF.
- (b) Install the transmission wire and bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
- (c) Connect the transmission wire connector.

### 4. INSTALL TRANSMISSION VALVE BODY ASSY (See page 40-23)