


REPLACEMENT

HINT:

COMPONENTS: See page 60-37

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE PARKING BRAKE HOLE COVER SUB-ASSY** (See page 71-10)
4. **REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)**
(See page 71-10)
5. **REMOVE SHIFTING HOLE COVER SUB-ASSY (M/T TRANSAXLE)** (See page 71-10)
6. **REMOVE CONSOLE PANEL UPPER** (See page 71-10)
7. **REMOVE CONSOLE BOX CARPET** (See page 71-10)
8. **REMOVE RR CONSOLE BOX** (See page 71-10)

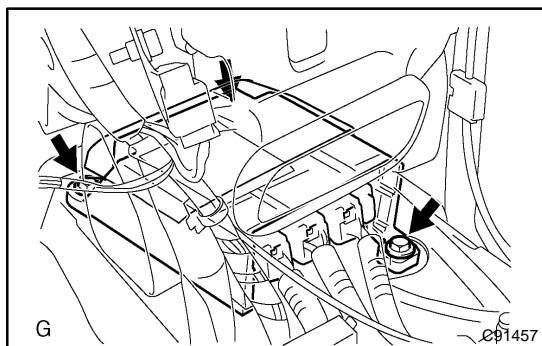

9. **REMOVE AIR BAG SENSOR ASSY CENTER**
 - (a) Disconnect the 3 connectors from the airbag sensor assy center.
 - (b) Remove the 3 bolts and airbag sensor assy center.

10. **INSPECT AIR BAG SENSOR ASSY CENTER** (See page 60-8)
11. **INSTALL AIR BAG SENSOR ASSY CENTER**
 - (a) Check that the ignition switch is turned to OFF.
 - (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Temporarily install the airbag sensor assy center with the 3 bolts.
- (d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (e) Connect the connector to the airbag sensor assy center.
- (f) Check that no play is identified.

12. **INSPECT SRS WARNING LIGHT** (See page 05-424)