


REPLACEMENT

HINT:

COMPONENTS: See page 60-39

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)

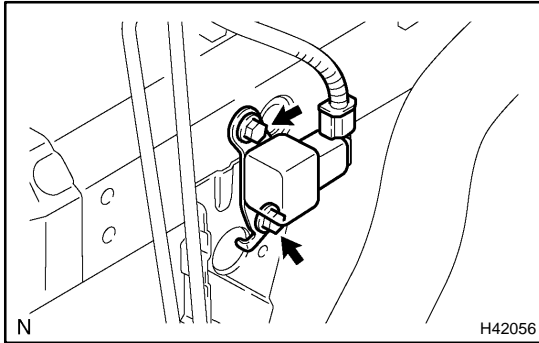

3. **REMOVE AIR BAG FRONT RH SENSOR**
 - (a) Disconnect the connector from the airbag front RH sensor.
 - (b) Remove the 2 bolts and airbag front RH sensor.

4. **INSPECT AIR BAG FRONT RH SENSOR** (See page 60-8)
5. **INSTALL AIR BAG FRONT RH SENSOR**
 - (a) Check that the ignition switch is turned to OFF.
 - (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Install the airbag front RH sensor with the 2 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
 - (d) Connect the connector to the airbag front RH sensor.
 - (e) Check that no play is identified.
6. **INSPECT SRS WARNING LIGHT** (See page 05-424)