


## REPLACEMENT

HINT:

COMPONENTS: See page 60-39

1. **PRECAUTION (See page 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60-1)**

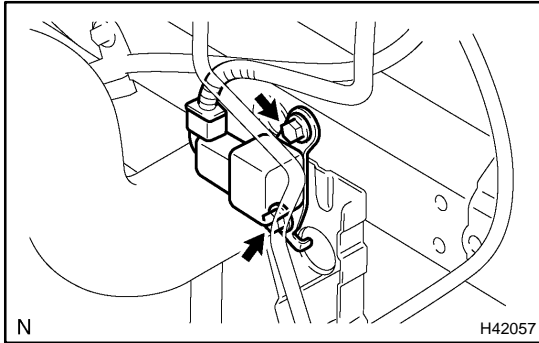

3. **REMOVE AIR BAG SENSOR FRONT LH**
  - (a) Disconnect the connector from the airbag sensor front LH.
  - (b) Remove the 2 bolts and airbag sensor front LH.

4. **INSPECT AIR BAG SENSOR FRONT LH (See page 60-8)**
5. **INSTALL AIR BAG SENSOR FRONT LH**
  - (a) Check that the ignition switch is turned to OFF.
  - (b) Check that the battery negative terminal is disconnected.

**NOTICE:**

**Do not start the operation for 90 seconds after removing the terminal.**

- (c) Install the airbag sensor front LH with the 2 bolts.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**
- (d) Connect the connector to the airbag sensor front LH.
- (e) Check that no play is identified.
6. **INSPECT SRS WARNING LIGHT (See page 05-424)**