


REPLACEMENT

HINT:


COMPONENTS: See page 60-12

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)

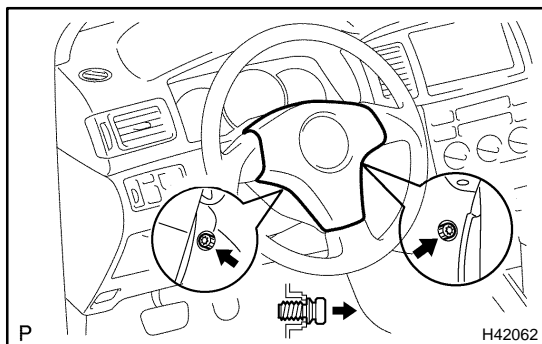

3. REMOVE HORN BUTTON ASSY

- (a) Place the front wheels facing straight ahead.
- (b) Using a torx socket wrench (T30), loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.
- (c) Pull out the horn button assy from the steering wheel assy.
- (d) Using a screwdriver, release the lock part of each airbag connector and disconnect the 2 airbag connectors.

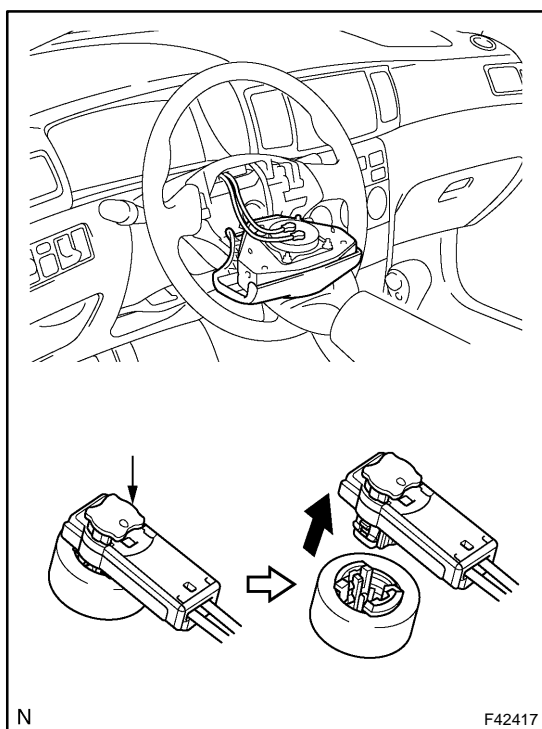

4. INSPECT HORN BUTTON ASSY (See page 60-8)

5. INSTALL HORN BUTTON ASSY

- (a) Connect the airbag connectors and horn connector.
- (b) Install the horn button assy after confirming that the circumference groove of the torx screws is caught on the screw case.
- (c) Using a torx socket wrench (T 30), install the 2 screws.
Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)
6. **INSPECT SRS WARNING LIGHT** (See page 05-424)