


REPLACEMENT

HINT:

COMPONENTS: See page 60-45

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE SEAT TRACK UPPER RAIL COVER RH**
4. **REMOVE SEAT TRACK UPPER RAIL COVER LH**
5. **REMOVE FRONT SEAT ASSY LH** (See page 72-2)

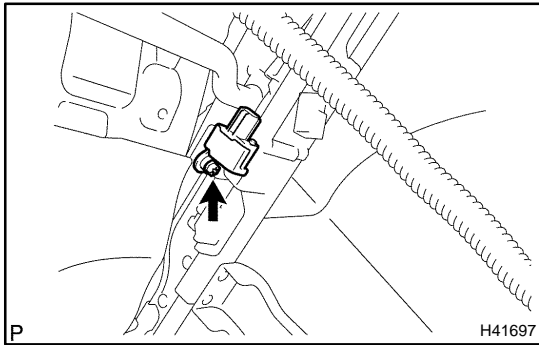

6. **REMOVE SEAT POSITION AIR BAG SENSOR**
 - (a) Disconnect the connector of the seat position airbag sensor.
 - (b) Using a torx socket wrench (T30), remove the torx screw and seat position airbag sensor.

7. INSTALL SEAT POSITION AIR BAG SENSOR

- (a) Using a torx socket wrench (T30), install the seat position airbag sensor with the torx screw.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (b) Connect the connector of the seat position airbag sensor.

NOTICE:

- Installation of the connector is done with the seat position airbag sensor installed. Make sure the seat position airbag sensor is installed to the specified torque.
 - If the seat position airbag sensor has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the seat position airbag sensor with a new one.
 - When installing the seat position airbag sensor, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
 - After installation, shake the seat position airbag sensor to check that there is no looseness.
8. **INSTALL FRONT SEAT ASSY LH**
Torque: 47.1 N·m (480 kgf·cm, 35 ft·lbf)
 9. **INSPECT SRS WARNING LIGHT** (See page 05-424)