


## REPLACEMENT

HINT:

COMPONENTS: See page 60-43

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE FRONT DOOR SCUFF PLATE RH** (See page 76-21)
4. **REMOVE REAR DOOR SCUFF PLATE RH** (See page 76-21)
5. **REMOVE FRONT DOOR OPENING TRIM RH** (See page 76-21)
6. **REMOVE REAR DOOR OPENING TRIM RH** (See page 76-21)
7. **REMOVE LAP BELT OUTER ANCHOR COVER** (See page 76-21)
8. **REMOVE CENTER PILLAR GARNISH LOWER RH** (See page 76-21)
9. **REMOVE FRONT SEAT OUTER BELT ASSY RH** (See page 61-7)

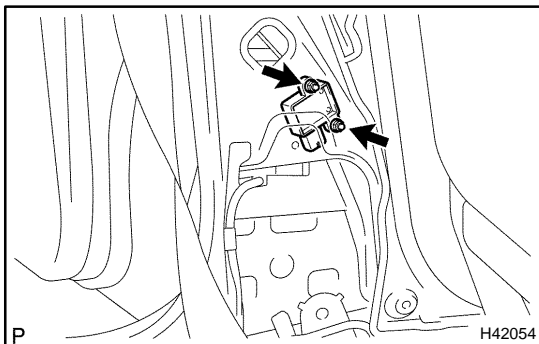

10. **REMOVE SIDE AIR BAG SENSOR ASSY RH**
  - (a) Disconnect the connector from the side airbag sensor assy RH.
  - (b) Remove the 2 nuts and side airbag sensor assy RH.

11. **INSPECT SIDE AIR BAG SENSOR ASSY RH** (See page 60-8)
12. **INSTALL SIDE AIR BAG SENSOR ASSY RH**
  - (a) Install the 2 nuts and side airbag sensor assy RH.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**
  - (b) Connect the side airbag sensor connector.

**NOTICE:**

- Installation of the connector is done with the sensor assembly installed. Make sure that the sensor assembly is installed to the specified torque.
  - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
  - When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
  - After installation, shake the sensor assembly to check that there is no looseness.
13. **INSTALL FRONT SEAT OUTER BELT ASSY RH**  
**Torque:**  
Upper bolt: 4.9 N·m (50 kgf·cm, 43 in·lbf)  
Lower bolt: 41.2 N·m (420 kgf·cm, 30 ft·lbf)
  14. **INSPECT SRS WARNING LIGHT** (See page 05-424)