


REPLACEMENT

HINT:

COMPONENTS: See page 60-12

1. **PRECAUTION (See page 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60-1)**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
 - (a) Check that the front wheels are facing straight ahead.
4. **REMOVE HORN BUTTON ASSY (See page 60-13)**
5. **REMOVE STEERING WHEEL ASSY (See page 50-8)**
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
6. **REMOVE STEERING COLUMN COVER**

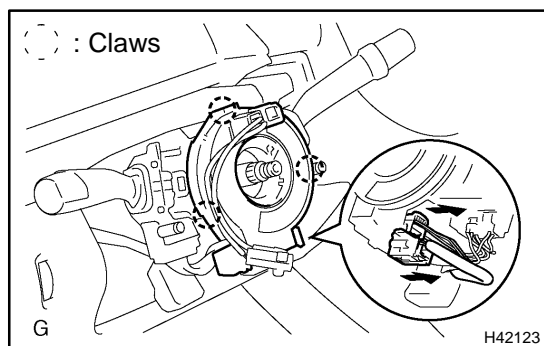

7. **REMOVE SPIRAL CABLE SUB-ASSY**
 - (a) Disconnect the airbag connector and the connector from the spiral cable sub-assy.
 - (b) Release the 3 claws and remove the spiral cable sub-assy.

8. **INSPECT SPIRAL CABLE SUB-ASSY (See page 60-8)**
 - (a) If the following condition is identified, replace the spiral cable sub-assy with a new one.

Condition:

Scratches or cracks on the connector

Cracks, dents or chipping of the spiral cable sub-assy

9. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
 - (a) Check that the front wheels are facing straight ahead.

10. **INSTALL SPIRAL CABLE SUB-ASSY**
 - (a) Set the turn signal switch in neutral position.

NOTICE:

Make sure of the neutral position since the pin of the turn signal switch may be snapped.

- (b) Engage the 3 claws and install the spiral cable sub-assy.

NOTICE:

When replacing the spiral cable sub-assy with a new one, remove the lock pin before installing the handle.


- (c) Connect the airbag connector and the connector connecting to the spiral cable sub-assy.
- (d) Install the steering column cover with the 3 screws.

11. CENTER SPIRAL CABLE

- (a) Check that the ignition switch is turned to OFF.
- (b) Check that the battery negative terminal is disconnected.

NOTICE:


Do not start the operation for 90 seconds after removing the terminal.

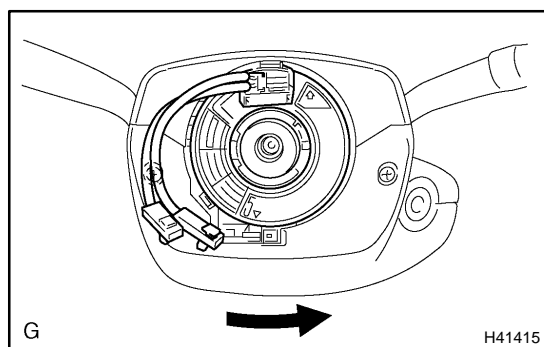

- (c) Turn the cable counterclockwise by hand until it becomes harder to turn.

HINT:

The cable will rotate about 2.5 turns to either left or right of the center.

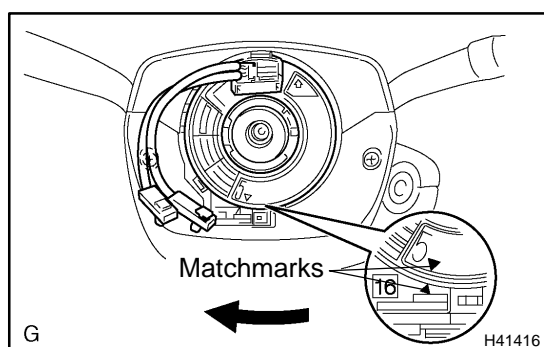

- (d) Then rotate the cable clockwise about 2.5 turns to align the marks.

12. INSTALL STEERING WHEEL ASSY (See page 50-8)

Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)

13. INSTALL HORN BUTTON ASSY (See page 60-13)

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

14. INSPECT HORN BUTTON ASSY (See page 60-8)**15. INSPECT SRS WARNING LIGHT (See page 05-424)**