

# FRONT SEAT BELT


## PRECAUTION

610FO-01

### CAUTION:

Replace the faulty parts of the seat belt systems (outer belt, inner belt, bolts, nuts, adjustable shoulder anchor, tether anchor hardware, sill-bar, etc.).

Seat belt systems not in use at the time of a collision should also be inspected and replaced if found to be damaged or working improperly.

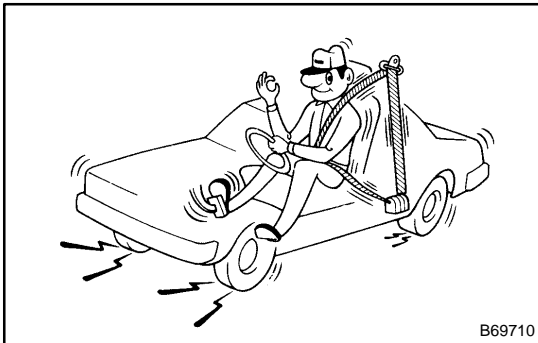

### 1. RUNNING TEST

- (a) Fasten the front seat belts.
- (b) Drive the vehicle at 16 km/h (10 mph) and slam on the brakes. Check that the belt locks and cannot be extended at this time.

### HINT:

Conduct this test in a safe area. If the belt does not lock, remove the belt assembly and perform the inspections. Also whenever installing a new belt assembly, verify the proper operation before installation.