


# INSPECTION

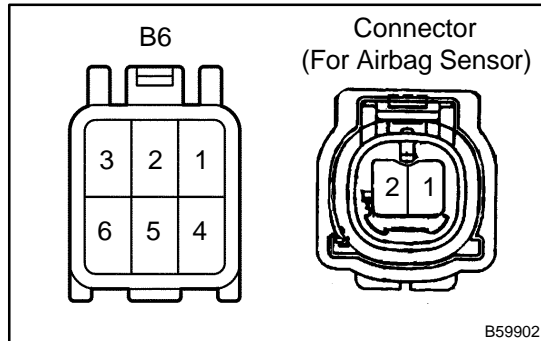


## 1. INSPECT FRONT SEAT INNER BELT ASSY LH

- (a) When fastening the seat belt (buckle switch ON).
- (1) Inspect the continuity and resistance between the terminals.

### Standard:

Terminal No.	Specified condition
B6-1 ↔ B6-2	1,330 Ω
B6-1 ↔ B6-3	No continuity
B6-4 ↔ 2	Continuity
B6-5 ↔ 1	Continuity

If the result is not as specified, replace the inner belt.

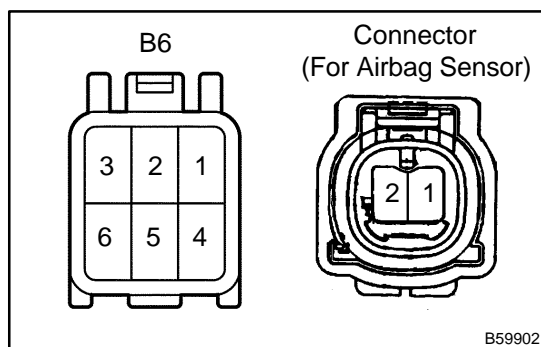


- (b) When releasing the seat belt (buckle switch OFF).

- (1) Inspect the continuity and resistance between the terminals.

### Standard:


Terminal No.	Specified condition
B6-1 ↔ B6-2	330 Ω
B6-1 ↔ B6-3	Continuity
B6-4 ↔ 2	Continuity
B6-5 ↔ 1	Continuity

If the result is not as specified, replace the inner belt.

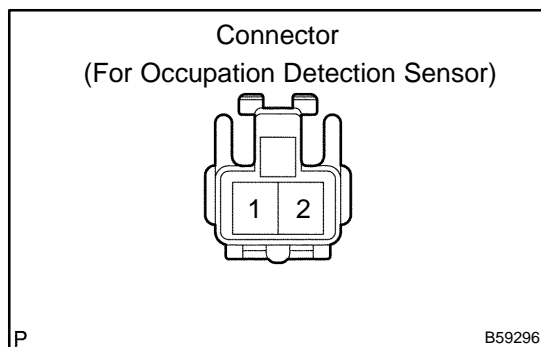

## 2. INSPECT FRONT SEAT INNER BELT ASSY RH

- (a) Short between connector terminals 1 and 2 for the occupation detection sensor (seat is occupied).

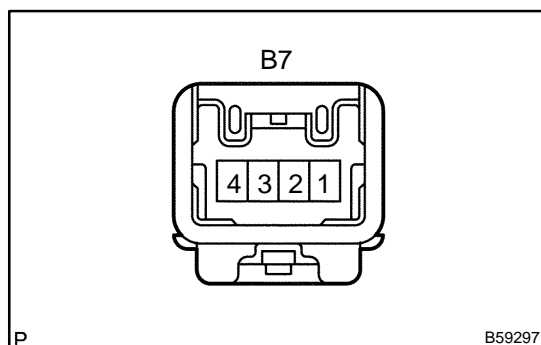


- (b) When fastening the seat belt (buckle switch is ON and seat is occupied).

- (1) Inspect the continuity between the terminals of the connector for the warning switch.

### Standard:


Terminal No.	Specified condition
B7-3 ↔ B7-4	Continuity
B7-1 ↔ B7-4	No continuity

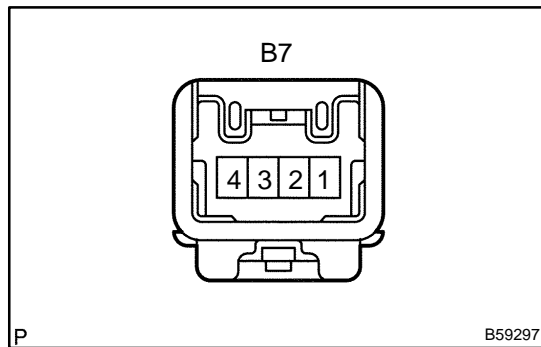


- (c) When releasing the seat belt (buckle switch is OFF and seat is occupied).
- (1) Inspect the continuity between the terminals of the connector for the warning switch.

**Standard:**

Terminal No.	Specified condition
B7-3 ↔ B7-4	Continuity
B7-1 ↔ B7-2	Continuity

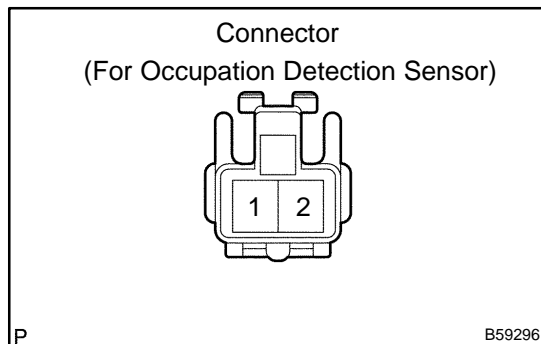


- (d) Disconnect the occupation detection sensor connector (seat is not occupied).

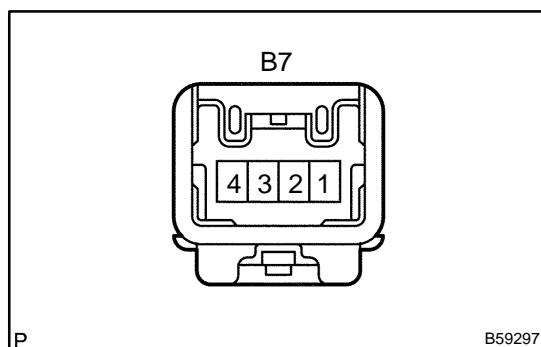

- (e) When fastening the seat belt (buckle switch is not ON and seat is occupied).
- (1) Inspect the continuity between the terminals of the connector for the warning switch.

**Standard:**

Terminal No.	Specified condition
B7-3 ↔ B7-4	No continuity
B7-1 ↔ B7-2	No continuity

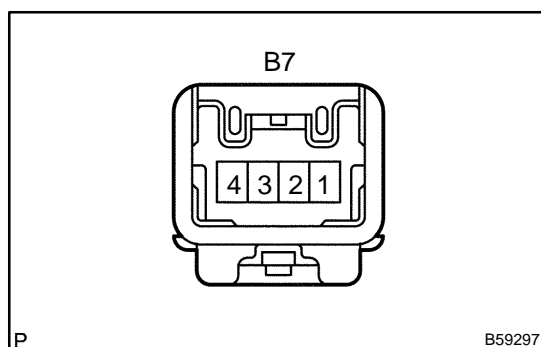

- (f) When releasing the seat belt (buckle switch is not OFF and seat is occupied).
- (1) Inspect the continuity between the terminals of the connector for the warning switch.

**Standard:**

Terminal No.	Specified condition
B7-3 ↔ B7-4	No continuity
B7-1 ↔ B7-2	Continuity

If the result is not as specified, replace the inner belt.