

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Driver's seat belt warning lamp does not light up	<ol style="list-style-type: none"> 1. GAUGE fuse 2. Combination meter 3. Airbag sensor assembly center 4. Front seat inner belt assembly LH 5. Wire harness 	<p style="text-align: center;">☒</p> <p style="text-align: center;">71-17</p> <p style="text-align: center;">60-38</p> <p style="text-align: center;">61-3</p> <p style="text-align: center;">☒</p>
Passenger's seat belt warning lamp does not light up	<ol style="list-style-type: none"> 1. GAUGE fuse 2. Passenger's seat belt warning lamp 3. Front seat inner belt assembly RH 4. Wire harness 	<p style="text-align: center;">☒</p> <p style="text-align: center;">61-3</p> <p style="text-align: center;">61-3</p> <p style="text-align: center;">☒</p>