



BACK UP LAMP ASSY LH REPLACEMENT

650GY-01


1. REMOVE BACK UP LAMP ASSY LH

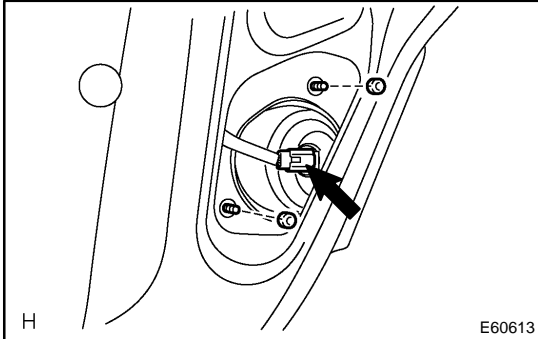

- (a) Remove the service hole cover.
- (b) Remove the 2 nuts and disconnect the connector.

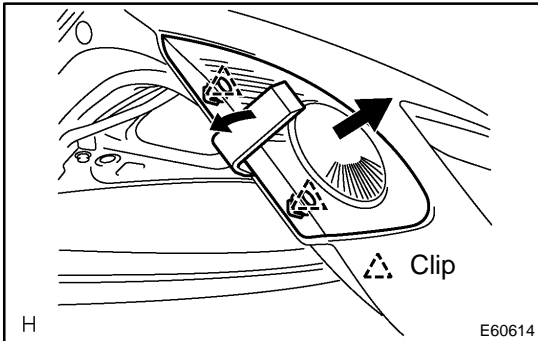

- (c) Using a mouldingremover, remove the 2 clips and back up light assy LH.

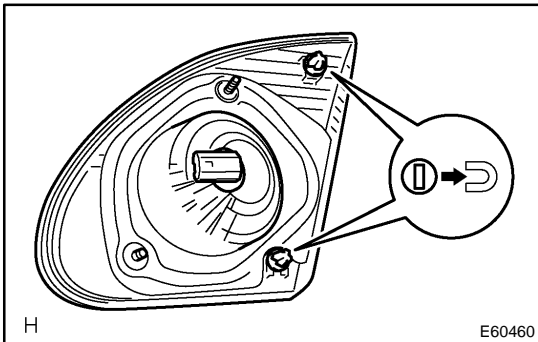

2. INSTALL BACK UP LAMP ASSY LH

- (a) Set the 2 clips on the back up light assy LH as shown in the illustration.
- (b) Connect the connector.
- (c) Install the back up light LH with 2 nuts.