


FOG LAMP ASSY LH REPLACEMENT

650GU-01

1. REMOVE RADIATOR GRILLE SUB-ASSY(See page 76-2)
2. REMOVE FRONT BUMPER COVER(See page 76-2)

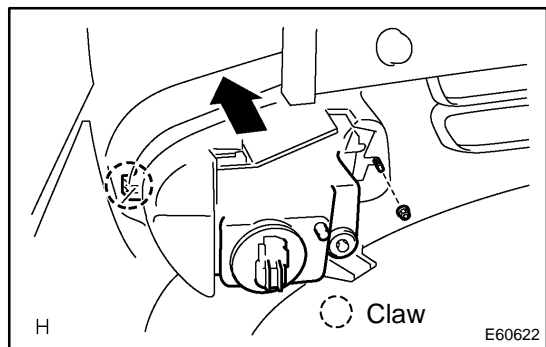

3. REMOVE FOG LAMP ASSY LH
 - (a) Remove a nut and release a claw.
 - (b) Remove the fog light assy LH.

4. PUT VEHICLE THESE CONDITIONS(See page 65-18)
5. ADJUST FOG LIGHT AIM(See page 65-18)
6. CHECK FOG LIGHT AIM(See page 65-18)