



HEADLAMP DIMMER SWITCH ASSY REPLACEMENT

650H0-01

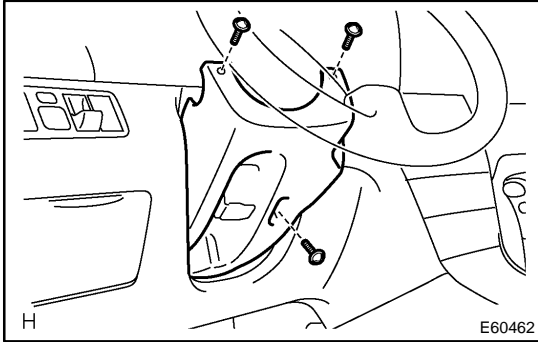

1. **REMOVE STEERING COLUMN COVER LWR**
 - (a) Remove 3 screws and steering column cover LWR.

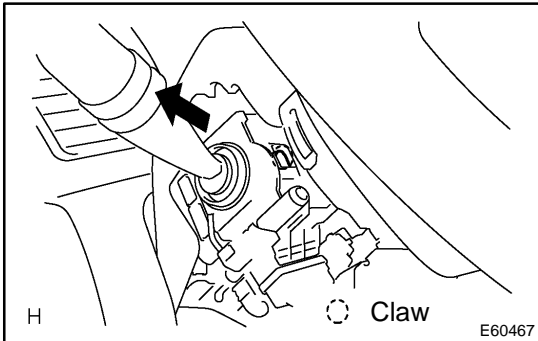

2. **REMOVE HEADLAMP DIMMER SWITCH ASSY**
 - (a) Disconnect the connector.
 - (b) Release the claw and pull out the head light dimmer switch assy.