

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

1. HEADLAMP AND TAIL LAMP

Symptom	Suspected Area	See page
"LO-Beam" does not come on (One side).	1. Bulb 2. HEAD RH LWR fuse or HEAD LH LWR fuse 3. Wire harness	- - -
"LO-Beam" does not come on (All).	1. HEAD Relay 2. Headlamp dimmer switch assy 3. Daytime running light relay 4. Wire harness	65-7 65-7 65-4 -
"HI-Beam" does not come on (One side).	1. Bulb 2. HEAD RH UPR fuse or HEAD LH UPR fuse 3. Wire harness	- - -
"HI-Beam" does not come on (All).	1. DIMMER relay 2. Headlamp dimmer switch assy 3. Daytime running light relay 4. Wire harness	65-7 65-7 65-4 -
"Flash" does not operate (All).	1. Headlamp dimmer switch assy 2. Daytime running light relay 3. Wire harness	65-7 65-4 -
Headlamp is dark.	1. Bulb 2. Wire harness	- -
Only one tail lamp comes on.	1. Bulb 2. Wire harness	- -
Both tail lamps do not come on (Headlamps are normal).	1. TAIL fuse 2. TAIL relay (USA only) 3. Headlamp dimmer switch assy 4. Daytime running light relay (USA only) 5. Wire harness	- 65-7 65-7 65-4 -
Both tail lamps do not come on (Headlamps do not come on).	1. Headlamp dimmer switch assy 2. Wire harness	65-7 -
Headlamp does not come on with engine running, parking brake released, and light control switch off.	1. HEAD relay 2. Generator 3. Parking brake switch 4. Daytime running light relay 5. Wire harness	65-7 - - 65-4 -

2. FRONT FOG LAMP SYSTEM

Symptom	Suspected Area	See page
Front fog lamps do not come on with light control switch in the HEAD position (Headlamps are normal).	1. FOG fuse 2. FOG relay 3. Headlamp dimmer switch assy 4. Wire harness	- 65-7 65-7 -
Only one front fog lamp does not come on.	1. Bulb 2. Wire harness	- -

3. TURN SIGNAL AND HAZARD WARNING SYSTEM

Symptom	Suspected Area	See page
"Hazard" and "Turn" do not come on.	1. HAZARD fuse 2. Turn signal flasher relay 3. Wire harness	– 65-4 –
Hazard warning lamp does not come on. (Turn is normal)	1. Hazard warning signal switch assy 2. Wire harness	65-7 –
Turn signal does not come on. (Hazard is normal)	1. Headlamp dimmer switch assy 2. Wire harness	65-7 –
Turn signal does not come on in one direction.	1. Headlamp dimmer switch assy 2. Wire harness	65-7 –
Only one bulb does not come on.	1. Bulb 2. Wire harness	– –

4. STOP LAMP SYSTEM

Symptom	Suspected Area	See page
Both stop lamps do not come on.	1. STOP fuse 2. Stop lamp switch assy 3. Wire harness	– 65-7 –
Stop lamp always remains ON.	1. Stop lamp switch assy 2. Wire harness	65-7 –
Stop lamp does not come on (One side).	1. Bulb 2. Wire harness	– –

5. BACK UP LAMP SYSTEM

Symptom	Suspected Area	See page
Both back up lamps do not come on.	1. GAUGE fuse 2. Back up lamp switch (M/T) 3. Park/Neutral Position switch (A/T) 4. Wire harness	– 65-7 05-379 –
Both back up lamps remain always ON.	1. Back up lamp switch (M/T) 2. Park/Neutral Position switch (A/T) 3. Wire harness	65-7 05-379 –
Back up lamp does not come on (One side).	1. Bulb 2. Wire harness	– –

6. INTERIOR LAMP SYSTEM

Symptom	Suspected Area	See page
Room lamp do not come on.	1. Bulb 2. Wire harness	– –

7. LIGHT CONTROL RHEOSTAT SYSTEM

Symptom	Suspected Area	See page
Light control rheostat system does not operate.	1. Light control rheostat 2. Wire harness	65-7 –