# ANTENNA CORD SUB-ASSY REPLACEMENT

670E3\_01

HINT:

COMPONENTS: See page 67-12


1. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER(See page 71-10)

HINT:

- Refer to the procedure until the step, "REMOVE INSTRUMENT PANEL SUB-ASSY UPPER" of INSTRUMENT PANEL SUB-ASSY LOWER.
- Remove the related parts as long as the antenna cord sub–assy can be removed.
- 2. REMOVE VISOR HOLDER(See page 76-21)

HINT:

- Refer to the procedure until the step, "REMOVE VISOR HOLDER" of ROOF HEADLINING ASSY.
- Remove the parts related to the roof headlining assy in the range that antenna cord can be cut off.
- 3. REMOVE SUN ROOF OPENING TRIM MOULDING (W/ SLIDING ROOF)

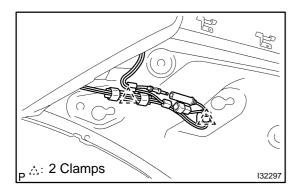


## 4. DISCONNECT ANTENNA CORD SUB-ASSY

- (a) REAR SIDE:
- Disconnect the connector and antenna cord plug. (b) REAR SIDE:
- Remove the 2 clamps.

2004 COROLLA (RM1037U)

Author: Date: 1721

# (c) FRONT SIDE: Remove the 9 clamps.

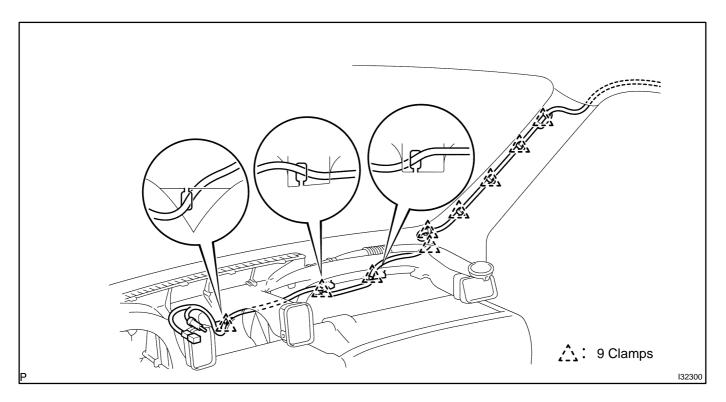

# 5. REMOVE ROOF HEADLINING ASSY(See page 76–21)

# **NOTICE:**

Do not bend the roof headlining assy.


- 6. REMOVE ANTENNA CORD SUB-ASSY
- (a) Remove the antenna cord sub–assy from the roof headlining.

2004 COROLLA (RM1037U)

Author: Date: 1722

### 7. INSTALL ANTENNA CORD SUB-ASSY

- (a) Tape the antenna cord sub–assy at the position of the roof headlining shown in the illustration. **NOTICE:**
- The antenna cord sub-assy should come to the center of the tape (100 mm(3.94 in.) x 25 mm(0.98 in.)) when taped.
- Try not to touch the adhesive side of the tape when taping.

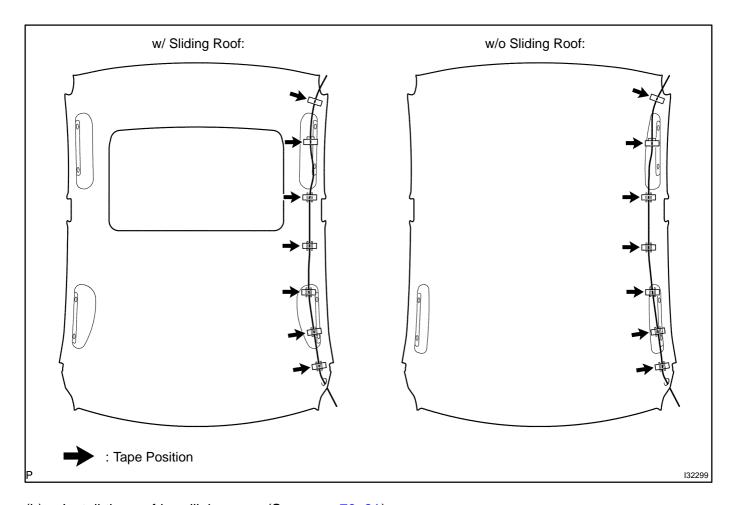

- (b) Install the roof headlining assy (See page 76–21).
- (c) Engage the 9 clamps at the front side of antenna cord.
- (d) Connect the plug and connector at the rear side of antenna cord.
- 8. INSTALL REAR SEAT BACK ASSY (FIXED TYPE REAR SEAT)(See page 72-8)
- 9. INSTALL REAR SEAT BACK ASSY (SEPARATED TYPE REAR SEAT)(See page 72-6)
- 10. INSTALL BENCH TYPE REAR SEAT CUSHION ASSY(See page 72-6 or 72-8)
- 11. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER(See page 71–10)

#### HINT:

Refer to the procedure until the step, "INSTALL INSTRUMENT PANEL SUB-ASSY UPPER" of INSTRUMENT PANEL SUB-ASSY LOWER.