


# FRONT NO.2 SPEAKER ASSY REPLACEMENT

670E1-01

HINT:

COMPONENTS: See page 67-1

1. REMOVE FRONT ARMREST ASSY LH(See page 75-7)
2. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (W/ POWER WINDOW)  
(See page 75-7)
3. REMOVE FRONT ARMREST BASE PANEL UPPER LH (W/O POWER WINDOW)  
(See page 75-7)
4. REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSY (W/O POWER WINDOW)  
(See page 75-7)
5. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH(See page 75-7)
6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH(See page 75-7)

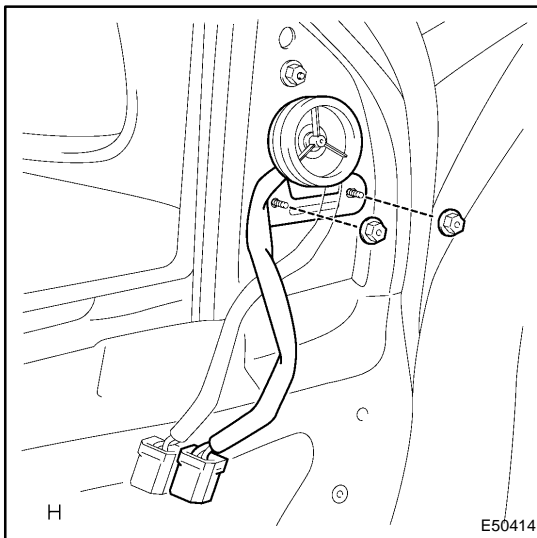

7. REMOVE FRONT NO.2 SPEAKER ASSY
  - (a) Open the part of service hole cover, then disconnect the connector.
  - (b) Remove the 2 nuts and front No. 2 speaker assy.

8. INSTALL FRONT DOOR WINDOW REGULATOR HANDLE ASSY (W/O POWER WINDOW)  
(See page 75-7)